



NEXCOM International Co., Ltd.

IoT Automation Solutions Business Group

Applied Panel PC

APPC 1240T/1245T/1540T/1740T/1940T

User Manual

CONTENTS

Preface

| | |
|--|-----|
| Copyright | iv |
| Disclaimer | iv |
| Acknowledgements | iv |
| Regulatory Compliance Statements | iv |
| Declaration of Conformity | iv |
| RoHS Compliance | v |
| Warranty and RMA | vi |
| Safety Information | ix |
| Installation Recommendations | ix |
| Safety Precautions | x |
| Technical Support and Assistance | xi |
| Conventions Used in this Manual | xi |
| Global Service Contact Information | xii |
| Package Contents | xiv |
| Ordering Information | xvi |

Chapter 1: Product Introduction

| | |
|------------------------|----|
| APPC 1240T/1245T | 1 |
| Specifications | 2 |
| APPC 1540T | 4 |
| Specifications | 5 |
| APPC 1740T | 7 |
| Specifications | 8 |
| APPC 1940T | 10 |
| Specifications | 11 |

| | |
|--------------------------------|----|
| Knowing Your APPC Series | 13 |
| Rear Top | 13 |
| Rear Bottom | 14 |
| Rear | 15 |
| Mechanical Dimensions | 16 |
| APPC 1240T/1245T | 16 |
| APPC 1540T | 17 |
| APPC 1740T | 18 |
| APPC 1940T | 19 |

Chapter 2: Jumpers and Connectors

| | |
|---|----|
| Before You Begin | 20 |
| Precautions | 20 |
| Jumper Settings | 21 |
| Locations of the Jumpers and Connectors | 22 |
| Top View | 22 |
| Bottom View | 23 |
| Jumpers and DIP Switch Settings | 24 |
| RTC and SRTC Clear Select | 24 |
| AT/ATX Power Select | 24 |
| Dimming Signal Level Select | 25 |
| LCD Panel VDD Power Select | 25 |
| Touch 4/5 Wire Select | 26 |
| COM1 RI Pin Power Select | 26 |
| COM2 RI Pin Power Select | 27 |
| Panel Resolution Select | 27 |
| Dimming Type Select | 28 |

| | |
|--|----|
| Connector Pin Definitions | 29 |
| External I/O Interfaces..... | 29 |
| Line-out Connector | 29 |
| Remote Power On/Off Switch..... | 29 |
| LAN1 Port | 30 |
| LAN2 Port | 30 |
| Dual USB 2.0 Port | 31 |
| Single USB 3.0 Port | 31 |
| COM1 Port | 32 |
| COM2 Port | 32 |
| VGA Port | 33 |
| 12V - 30V DC Power Input..... | 33 |
| CFast Card Slot | 34 |
| Reset Button | 34 |
| Internal Connectors..... | 35 |
| CCFL Panel Backlight Connector | 35 |
| LVDS Channel A..... | 35 |
| LVDS Channel B | 36 |
| Line-in/Mic-in Connector..... | 36 |
| Speaker-out Connector | 37 |
| USB Connector | 37 |
| Touch Sensor Connector | 38 |
| SATA Connector..... | 38 |
| SATA DOM Power Connector..... | 39 |
| DIO Connector (Optional)..... | 39 |
| Keyboard/Mouse Connector..... | 40 |
| Active LED Connector | 40 |
| Power Button..... | 41 |
| Backlight Control Input Connector..... | 41 |
| Dimming Control Input Connector..... | 42 |
| LVDS MCU FW Debug Connector..... | 42 |
| Smart Fan Connector | 43 |
| Battery Connector..... | 43 |

| | |
|--------------------------------|----|
| Post Code Debug Connector..... | 44 |
| SIM Card Slot..... | 44 |
| Mini-PCle Slot | 45 |
| Mini-PCle Slot (Wi-Fi/3G)..... | 46 |
| Block Diagram | 47 |

Chapter 3: System Setup

| | |
|---|----|
| Installing a SATA Hard Drive | 48 |
| Installing a CFast Card | 52 |
| Installing a SO-DIMM | 54 |
| Installing a SATA DOM (Half-Size Only)..... | 57 |
| Installing a Mini PCIe Module..... | 60 |
| Installing the Half-Size Mini PCIe Module | 62 |
| Installing the Full-Size Mini PCIe Module | 63 |
| Placing Panel Mount Hole Blocks..... | 67 |
| Installing the Power Adapter Bracket..... | 68 |
| Panel Mounting | 72 |

Chapter 4: BIOS Setup

| | |
|---------------------------------|----|
| About BIOS Setup | 74 |
| When to Configure the BIOS..... | 74 |
| Default Configuration | 75 |
| Entering Setup | 75 |
| Legends | 75 |
| BIOS Setup Utility..... | 77 |
| Main | 77 |
| Advanced | 78 |
| Chipset..... | 86 |
| Security | 89 |
| Boot..... | 89 |
| Save & Exit | 91 |

Appendix A: Power Consumption92

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

APPC 1240T/1245T/1540T/1740T/1940T are trademarks of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

1. NEXCOM makes products in accordance with the Industry standard and, NEXCOM warrants that all her Industry-grade IPC and System products will be free from defect in neither material nor workmanship for twenty-four (24) months from the day of invoice issued.
2. For NEXCOM Panel PC product lines (the APPC, MPPC series), they are also guaranteed against defect in materials and workmanship for the period of twenty-four (24) months in their motherboard design. For 3rd party parts, it follows with original suppliers' standard: 12 months for battery pack and LCD, 24 months for adaptor / add on modules (including GSM module, RFID module, and antenna).
3. If NEXCOM determines customer's warranty claim is valid, NEXCOM will repair or replace product(s) without additional charge for parts and labor. An extended Warranty Program will extend the warranty period of the product accordingly.

Warranty Coverage

The warranty applies only to products manufactured or distributed by NEXCOM and her subsidiaries. This warranty covers all the products/ shipments except for:

1. Any claimed defect, products that have been repaired or modified by persons who have not been authorized by NEXCOM or, products which have been subjected to misuse, abuse, accident, improper installation, or usage not in accordance with the product instruction. NEXCOM assumes no liability as a consequence of such events under the term of this warranty.

One example is the replacement of Tablet's or Hand-held's LCD display due to scratching stains or other degradation; these will not be covered under this warranty.

2. Damages caused by customers' delivery/shipping of the product or, product failure resulted from electrical power/voltage shock, or, installation of parts/components which are not supplied/approved by NEXCOM in advance.
3. Third-party products:
 - a. Software, such as the device drivers,
 - b. External devices such as HDD, printer, scanner, mouse, LCD panel, battery, and so on,
 - c. Accessory/parts that were not approved by NEXCOM and,
 - d. Accessory/parts were added to products after they were shipped from NEXCOM.

Product will be treated as "Out of Warranty " if:

- a. It expires the warranted 24 months period from the day it was purchased.
- b. It had been altered by persons other than an authorized NEXCOM service person or, which have been subjected to misuse, abuse, accident, or improper installation.
- c. It doesn't have the original NEXCOM Serial Number labeling for NEXCOM's warranty period identification or, tracking.

RMA that NEXCOM has determined not to be covered by the warranty will be charged the NEXCOM Standard Repair Fee for the repairing. If a RMA is determined to be not repairable, customer will be notified and product(s) may be returned to customer at their request; a minimum service fee may be charged however.

NEXCOM Return Merchandise Authorization (RMA) Procedure

For the RMA (Return Merchandise Authorization) shipment, customer is responsible for packaging and shipping the product to the designated NEXCOM service sites, with shipping charges prepaid by the customer. The original NEXCOM shipping box should be used whenever possible. NEXCOM shall pay for the return of the product to the customer's location. In case of expedited shipping request, an extra service charge shall be assessed and the customer is responsible for this extra return shipping charge.

1. Customers should enclose the "NEXCOM RMA Service Form" with the returned products.
2. Customers need to write down all the information related to the problem on the " NEXCOM RMA Service Form " when applying for the RMA service; information will help to understand the problem, including the fault description, on-screen messages, and pictures if possible.
3. Customers could send back the faulty product with or without the accessories and key parts such as the CPU and DIMM. If the key parts are included, please be noted clearly within the return form. NEXCOM takes no responsibility for the parts which are not listed in the return form.
4. Customers hold the responsibility to ensure that the packing of defective products is durable enough to be resistant against further damage due to the transportation; damage caused by transportation is treated as " Out of Warranty " under our Warranty specification.
5. RMA product(s) returned by NEXCOM to any location other than the

customer registered delivery address will incur an extra shipping charge, the customer is responsible for paying the extra shipping charges, duties, and taxes of this shipment.

Product Repairing

1. NEXCOM will repair defective products covered under this limited warranty that are returned to NEXCOM; if products do prove to be defective, they will be repaired during their warranty period unless other warranty terms have been specified.
2. NEXCOM owns all parts removed from repaired products.
3. NEXCOM will use parts made by various manufacturers in performing the repair.
4. The repaired products will be warranted subjected to the original warranty coverage and period only.
5. For products returned as defective but, proved to be no defect/fault after the RMA process, NEXCOM reserves the right to claim for a NDF (No Defect Found) Service Charge.
6. NEXCOM will issue RMA Report which included Repair Detailed Information to the customer when the defective products were repaired and returned.
7. In addition to the above, NEXCOM may authorize Independent/Third-party suppliers to repair the defective products for NEXCOM.

Out Of Warranty Service

There will be a service charge from NEXCOM for the “Out Of Warranty” product service; they are the Basic Diagnostic Service Fee and the Advanced Component Replacement Fee respectively. And, if the product can not be repaired, NEXCOM will either return the product to the customer or, just scrap it, followed by customer’s instruction.

1. Testing and Parts Replacement

NEXCOM will have the following Handling Charges for those OoW products that returned:

- a. Basic Labor Cost and Testing Fee: as Table listed.
 - b. Parts Fee: NEXCOM will charge for main IC chipsets such as the N.B., S.B., Super-IO, LAN, Sound, Memory, and so on.
 - c. 3rd-party Device Fee: products replacement for CPU, DIMM, HDD, Chassis, and UPS.
2. Out of Warranty product will have a three months warranty for the fixed issues. If the product failed with different problem within 3 months, they will still incur the service charge of “Out of Warranty”.
 3. Out of Warranty “products will not be repaired without a signed PI from the customer, the agreement of the repair process.

Add-on card, 3rd Party Device and board level repair cost higher than new product prices, customer can abandon to sign PI to repair and, please contact with sales to buy new products.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Chung-Cheng Rd.,
ZhongHe District, New Taipei City, 23586,
Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com

America

USA

NEXCOM USA

2883 Bayview Drive,
Fremont CA 94538, USA

Tel: +1-510-656-2248

Fax: +1-510-656-2158

Email: sales@nexcom.com

www.nexcom.com

Asia

Taiwan

NEXCOM Intelligent Systems

Taipei Office

13F, No.920, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NEXCOM Intelligent Systems

Taichung Office

16F, No.250, Sec. 2, Chongde Rd.,
Beitun Dist.,

Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

Email: sales@nexcom.com.tw

www.nexcom.com.tw

Japan

NEXCOM Japan

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan

Tel: +81-3-5419-7830

Fax: +81-3-5419-7832

Email: sales@nexcom-jp.com

www.nexcom-jp.com

China

NEXCOM China

Floor 5, No.4, No.7 fengxian middle Rd.,
(Beike Industrial Park), Haidian District,
Beijing, 100094, China

Tel: +86-10-5704-2680

Fax: +86-10-5704-2681

Email: sales@nexcom.cn

www.nexcom.cn

NEXCOM Shanghai

Room 603/604, Huiyinmingzun Plaza Bldg., 1,
No.609, Yunlin East Rd.,
Shanghai, 200333, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Room202, Building B,
the GuangMing Industrial Zone Zhonghua Rd.,
Minzhi Street, Longhua District,
Shenzhen 518131, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXCOM United System Service

Hui Yin Ming Zun Building Room 1108,
Building No. 11, 599 Yunling Road, Putuo District,
Shanghai, 200062, China
Tel: +86-21-6125-8282
Fax: +86-21-6125-8281
Email: frankyang@nexcom.cn
www.nexcom.cn

Europe**United Kingdom****NEXCOM EUROPE**

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

Italy**NEXCOM ITALIA S.r.l**


Via Lanino 42,
21047 Saronno (VA), Italia
Tel: +39 02 9628 0333
Fax: +39 02 9625 570
Email: nexcomitalia@nexcom.eu
www.nexcomitalia.it

Package Contents

Before continuing, verify that the package you received is complete. Your APPC 1740T/1540T/1245T/1240T package should have all the items listed in the table.

APPC 1740T/1540T/1245T/1240T

| Item | Description | Qty |
|------|---|-----|
| 1 | Panel Mount Kit | 12 |
| 2 | Driver CD | 1 |
| 3 | Touch Pen | 1 |
| 4 | Terminal Block 3-pin Phoenix Contact Plug | 1 |
| 5 | Flat Head Screws for HDD Installation | 4 |
| 6 | Mini-PCle Card Screws | 2 |
| 7 | Terminal Block 2-pin Phoenix Contact Plug | 1 |

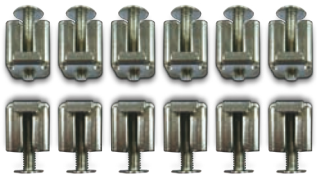

Panel Mount Kit
(APPC 1740T/1540T/1245T/1240T)



Driver CD



Touch Pen



Terminal Block
3-pin Phoenix
Contact Plug



Terminal Block
2-pin Phoenix
Contact Plug



Mini-PCle Card Screws



Flat Head Screws



Note: Package contents may vary depending on your country region, some items may be optional. Please contact your local distributor for more information.




Your APPC 1940T package should have all the items listed in the table.

APPC 1940T

| Item | Description | Qty |
|------|---|-----|
| 1 | Panel Mount Kit | 14 |
| 2 | Driver CD | 1 |
| 3 | Touch Pen | 1 |
| 4 | Terminal Block 3-pin Phoenix Contact Plug | 1 |
| 5 | Flat Head Screws for HDD Installation | 4 |
| 6 | Mini-PCle Card Screws | 2 |
| 7 | Terminal Block 2-pin Phoenix Contact Plug | 1 |



Note: Package contents may vary depending on your country region, some items may be optional. Please contact your local distributor for more information.

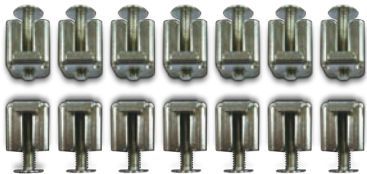

Panel Mount Kit
(APPC 1940T)



Driver CD



Touch Pen



Terminal Block
3-pin Phoenix
Contact Plug



Terminal Block
2-pin Phoenix
Contact Plug



Mini-PCle Card Screws



Flat Head Screws



Ordering Information

The following information below provides ordering information for the Applied Panel PC series.

Barebone

- **APPC 1240T-B (P/N: 10IA1240T10X0)**
12.1" SVGA LED backlight touch panel PC, Intel® Celeron® J1900 up to 2.42GHz, touch screen, 4GB DDR3L, 2 x RS232/422/485
- **APPC 1245T-B (P/N: 10IA1245T08X0)**
12.1" XGA LED backlight touch panel PC, Intel® Celeron® J1900 up to 2.42GHz, touch screen, 4GB DDR3L, 2 x RS232/422/485
- **APPC 1540T-C (P/N: 10IA1540T15X0)**
15" XGA LED backlight touch panel PC, Intel® Celeron® J1900 up to 2.42GHz, touch screen, 4GB DDR3L, 2 x RS232/422/485
- **APPC 1740T-B (P/N: 10IA1740T07X0)**
17" SXGA LED backlight touch panel PC, Intel® Celeron® J1900 up to 2.42GHz, touch screen, 4GB DDR3L, 2 x RS232/422/485
- **APPC 1940T-C (P/N: 10IA1940T10X0)**
19" SXGA LED backlight touch panel PC, Intel® Celeron® J1900 up to 2.42GHz, touch screen, 4GB DDR3L, 2 x RS232/422/485

Optional

- **12V, 60W AC/DC power adapter w/o power cord (P/N: 7400060031X00)**

CHAPTER 1: PRODUCT INTRODUCTION

APPC 1240T/1245T

Overview



Key Features

- 4:3 12.1" SVGA Fanless LED Panel Computer (APPC 1240T)
- 4:3 12.1" XGA Fanless LED Panel Computer (APPC 1245T)
- Intel® Celeron® J1900, Quad Core, Low Consumption CPU
- Flush Panel by 5-wire Touch Screen
- Dual GbE/2nd display-VGA/Line-out
- 3 x USB/2 x Mini-PCIe sockets/1 x CFast/2 x RS232/422/485
- DDR3L 4GB/2.5" HDD Bracket
- IP65 Compliant Front Panel
- Mounting Support: Panel/Wall/Stand/VESA 100mm x 100mm
- Wide Range Power Input 12V~30V DC

Specifications

Panel

APPC 1240T

- LED Size: 12.1", 4:3
- Resolution: SVGA 800 x 600
- Luminance: 500cd/m²
- Contrast ratio: 700
- LCD color: 16.7M
- Viewing Angle: 65(U), 75(D), 80(L), 80(R)
- Backlight: LED

APPC 1245T

- LED Size: 12.1", 4:3
- Resolution: XGA 1024 x 768
- Luminance: 500cd/m²
- Contrast ratio: 700
- LCD color: 16.2M
- Viewing Angle: 70(U), 70(D), 80(L), 80(R)
- Backlight: LED

Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 80%
- Interface: USB

System

- CPU: On-board Intel® Celeron® Quad Core processor J1900, up to 2.42GHz, 2M L2 Cache
- BIOS: AMI BIOS

- System memory: 2x 204-pin DDR3L SO-DIMM socket, 4GB DDR3L (default), support up to 8GB DDR3L-1066/1333, non-ECC and un-buffered
- Storage Device:
 - 1x external locked CFast socket
 - 1x hard drive bay: optional 1x 2.5" SATA HDD or 1x SATA DOM
- Watchdog timer: Watchdog timeout can be programmed by software from 1 second to 255 seconds and from 1 minute to 255 minutes (Tolerance 15% under room temperature 25°C)
- H/W status monitor: Monitoring system temperature, and voltage
- Expansion: 2x Mini-PCle sockets (support optional Wi-Fi or 3.5G module)

Rear I/O

- Ethernet: 2x RJ45
- 2nd display VGA port: 1x DB15
- Audio port: 1x Line-out
- USB: 2x USB 2.0, 1x USB 3.0
- Power switch
- Reset button
- 2-pin Remote Power on/off switch
- COM #1: RS232/422/485 w/ 2.5kv isolated
- COM #2: RS232/422/485 w/ 2.5kv isolated

Audio

- HD audio codec: Realtek ALC886-GR
- Audio interface: Line-out

Ethernet

- LAN chip: dual Intel® I210AT Gigabit LAN
- Ethernet interface: 10/100/1000 Base-Tx Ethernet compatible

Mechanical & Environment

- Color: Pantone black\RAL 15 00 front bezel w/ Pantone 400C\RAL 090 80 10 metal style membrane and black silver PC box
- IP protection: IP65 front
- Mounting: panel/wall/stand/VESA 100mm x 100mm
- Power input: 12V ~ 30V DC
- Power adapter: Optional AC to DC power adapter (+12V, 60W)
- Vibration:
 - IEC 68 2-64 (w/ HDD)
 - 1Grms @ sine, 5~500Hz, 1hr/axis (HDD Operating)
 - 2Grms @ sine, 5~500Hz, 1hr/axis (CFast Operating)
 - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
 - IEC 68 2-27
 - HDD: 20G @ wall mount, half sine, 11ms
- Operating temperature: -5°C to 60°C
- Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
Limits to be at 90% RH at max 50°C
- Dimension: 317 x 243 x 65.5mm
- Weight: 3.6kg

Certifications

- CE approval
- FCC Class A

OS Support Lists

- Windows 10 64-bit
- Windows 8 32-bit/64-bit
- Windows 7 32-bit/64-bit
- WinCE 7.0

APPC 1540T



Key Features

- 4:3 15" XGA Fanless LED Panel Computer
- Intel® Celeron® J1900, Quad Core, Low Consumption CPU
- Flush Panel by 5-wire Touch Screen
- Dual GbE/2nd display-VGA/Line-out
- 3 x USB/2 x Mini-PCle sockets/1 x CFast/2 x RS232/422/485
- DDR3L 4GB/2.5" HDD Bracket
- IP65 Compliant Front Panel
- Mounting Support: Panel/Wall/Stand/VESA 100mm x 100mm
- Wide Range Power Input 12V~30V DC

Specifications

Panel

- LED Size: 15", 4:3
- Resolution: XGA 1024 x 768
- Luminance: 500cd/m²
- Contrast ratio: 2500
- LCD color: 16.7M
- Viewing Angle: 80(U), 80(D), 80(L), 80(R)
- Backlight: LED

Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 81%
- Interface: USB

System

- CPU: On-board Intel® Celeron® Quad Core processor J1900, up to 2.42GHz, 2M L2 Cache
- BIOS: AMI BIOS
- System memory: 2x 204-pin DDR3L SO-DIMM socket, 4GB DDR3L (default), support up to 8GB DDR3L-1066/1333, non-ECC and un-buffered
- Storage Device:
 - 1x external locked CFast socket
 - 1x hard drive bay: optional 1x 2.5" SATA HDD or 1x SATA DOM
- Watchdog timer: Watchdog timeout can be programmed by software from 1 second to 255 seconds and from 1 minute to 255 minutes (Tolerance 15% under room temperature 25°C)
- H/W status monitor: Monitoring system temperature, and voltage
- Expansion: 2x Mini-PCIe sockets (support optional Wi-Fi or 3.5G module)

Rear I/O

- Ethernet: 2x RJ45
- 2nd display VGA port: 1x DB15
- Audio port: 1x Line-out
- USB: 2x USB 2.0, 1x USB 3.0
- Power switch
- Reset button
- 2-pin Remote Power on/off switch
- COM #1: RS232/422/485 w/ 2.5kv isolated
- COM #2: RS232/422/485 w/ 2.5kv isolated

Audio

- HD audio codec: Realtek ALC886-GR
- Audio interface: Line-out

Ethernet

- LAN chip: dual Intel® I210AT Gigabit LAN
- Ethernet interface: 10/100/1000 Base-Tx Ethernet compatible

Mechanical & Environment

- Color: Pantone black\RAL 15 00 front bezel w/ Pantone 400C\RAL 090 80 10 metal style membrane and black silver PC box
- IP protection: IP65 front
- Mounting: panel/wall/stand/VESA 100mm x 100mm
- Power input: 12V~30VDC
- Power adapter: Optional AC to DC power adapter (+12V, 60W)
- Vibration:
 - IEC 68 2-64 (w/ HDD)
 - 1Grms @ sine, 5~500Hz, 1hr/axis (HDD Operating)

- 2Grms @ sine, 5~500Hz, 1hr/axis (CFast Operating)
- 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
 - IEC 68 2-27
 - HDD: 20G @ wall mount, half sine, 11ms
- Operating temperature: -5°C to 60°C
- Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
Limits to be at 90% RH at max 50°C
- Dimension: 384.37 x 309.95 x 63 mm
- Weight: 4.7kg

Certifications

- CE approval
- FCC Class A

OS Support Lists

- Windows 10 64-bit
- Windows 8 32-bit/64-bit
- Windows 7 32-bit/64-bit
- WinCE 7.0

APPC 1740T



Key Features

- 4:3 17" SXGA Fanless Panel Computer
- Intel® Celeron® J1900, Quad Core, Low Consumption CPU
- Flush Panel by 5-wire Touch Screen
- Dual GbE/2nd display-VGA/Line-out
- 3 x USB/2 x Mini-PCle sockets/1 x CFast/2 x RS232/422/485
- DDR3L 4GB/2.5" HDD Bracket
- IP65 Compliant Front Panel
- Mounting Support: Panel/Wall/Stand/VESA 100mm x 100mm
- Wide Range Power Input 12V~30V DC

Specifications

Panel

- LED Size: 17", 4:3
- Resolution: SXGA 1280 x 1024
- Luminance: 350cd/m²
- Contrast ratio: 800
- LCD color: 16.7M
- Viewing Angle: 60(U), 80(D), 80(L), 80(R)
- Backlight: LED

Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 81%
- Interface: USB

System

- CPU: On-board Intel® Celeron® Quad Core processor J1900, up to 2.42GHz, 2M L2 Cache
- BIOS: AMI BIOS
- System memory: 2x 204-pin DDR3L SO-DIMM socket, 4GB DDR3L (default), support up to 8GB DDR3L-1066/1333, non-ECC and un-buffered
- Storage Device:
 - 1x external locked CFast socket
 - 1x hard drive bay: optional 1x 2.5" SATA HDD or 1x SATA DOM
- Watchdog timer: Watchdog timeout can be programmed by software from 1 second to 255 seconds and from 1 minute to 255 minutes (Tolerance 15% under room temperature 25°C)
- H/W status monitor: Monitoring system temperature, and voltage
- Expansion: 2x Mini-PCIe sockets (support optional Wi-Fi or 3.5G module)

Rear I/O

- Ethernet: 2x RJ45
- 2nd display VGA port: 1x DB15
- Audio port: 1x Line-out
- USB: 2x USB 2.0, 1x USB 3.0
- Power switch
- Reset button
- 2-pin Remote Power on/off switch
- COM #1: RS232/422/485 w/ 2.5kv isolated
- COM #2: RS232/422/485 w/ 2.5kv isolated

Audio

- HD audio codec: Realtek ALC886-GR
- Audio interface: Line-out

Ethernet

- LAN chip: dual Intel® I210AT Gigabit LAN
- Ethernet interface: 10/100/1000 Base-Tx Ethernet compatible

Mechanical & Environment

- Color: Pantone black\RAL 15 00 front bezel w/ Pantone 400C\RAL 090 80 10 metal style membrane and black silver PC box
- IP protection: IP65 front
- Mounting: panel/wall/stand/VESA 100mm x 100mm
- Power input: 12V~30VDC
- Power adapter: Optional AC to DC power adapter (+12V, 60W)
- Vibration:
 - IEC 68 2-64 (w/ HDD)
 - 1Grms @ sine, 5~500Hz, 1hr/axis (HDD Operating)

- 2Grms @ sine, 5~500Hz, 1hr/axis (CFast Operating)
- 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
 - IEC 68 2-27
 - HDD: 20G @ wall mount, half sine, 11ms
- Operating temperature: -5°C to 60°C
- Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
Limits to be at 90% RH at max 50°C
- Dimension: 410.4 x 340.4 x 65.9mm
- Weight: 5.6kg

Certifications

- CE approval
- FCC Class A

OS Support Lists

- Windows 10 64-bit
- Windows 8 32-bit/64-bit
- Windows 7 32-bit/64-bit
- WinCE 7.0

APPC 1940T



Key Features

- 4:3 19" SXGA Fanless LED Panel Computer
- Intel® Celeron® J1900, Quad Core, Low Consumption CPU
- Flush Panel by 5-wire Touch Screen
- Dual GbE/2nd display-VGA/Line-out
- 3 x USB/2 x Mini-PCle sockets/1 x CFast/2 x RS232/422/485
- DDR3L 4GB/2.5" HDD Bracket
- IP65 Compliant Front Panel
- Mounting Support: Panel/Wall/Stand/VESA 100mm x 100mm
- Wide Range Power Input 12V~ 30V DC

Specifications

Panel

- LED Size: 19", 4:3
- Resolution: SXGA 1280 x 1024
- Luminance: 350cd/m²
- Contrast ratio: 1000
- LCD color: 16.7M
- Viewing Angle: 80(U), 80(D), 85(L), 85(R)
- Backlight: LED

Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 81%
- Interface: USB

System

- CPU: On-board Intel® Celeron® Quad Core processor J1900, up to 2.42GHz, 2M L2 Cache
- BIOS: AMI BIOS
- System memory: 2x 204-pin DDR3L SO-DIMM socket, 4GB DDR3L (default), support up to 8GB DDR3L-1066/1333, non-ECC and un-buffered
- Storage Device:
 - 1x external locked CFast socket
 - 1x hard drive bay: optional 1x 2.5" SATA HDD or 1x SATA DOM
- Watchdog timer: Watchdog timeout can be programmed by software from 1 second to 255 seconds and from 1 minute to 255 minutes (Tolerance 15% under room temperature 25°C)
- H/W status monitor: Monitoring system temperature, and voltage
- Expansion: 2x Mini-PCIe sockets (support optional Wi-Fi or 3.5G module)

Rear I/O

- Ethernet: 2x RJ45
- 2nd display VGA port: 1x DB15
- Audio port: 1x Line-out
- USB: 2x USB 2.0, 1x USB 3.0
- Power switch
- Reset button
- 2-pin Remote Power on/off switch
- COM #1: RS232/422/485 w/ 2.5kv isolated
- COM #2: RS232/422/485 w/ 2.5kv isolated

Audio

- HD audio codec: Realtek ALC886-GR
- Audio interface: Line-out

Ethernet

- LAN chip: dual Intel® I210AT Gigabit LAN
- Ethernet interface: 10/100/1000 Base-Tx Ethernet compatible

Mechanical & Environment

- Color: Pantone black\RAL 15 00 front bezel w/ Pantone 400C\RAL 090 80 10 metal style membrane and black silver PC box
- IP protection: IP65 front
- Mounting: panel/wall/stand/VESA 100mm x 100mm
- Power input: 12V~30V DC
- Power adapter: Optional AC to DC power adapter (+12V, 60W)
- Vibration:
 - IEC 68 2-64 (w/ HDD)
 - 1Grms @ sine, 5~500Hz, 1hr/axis (HDD Operating)

- 2Grms @ sine, 5~500Hz, 1hr/axis (CFast Operating)
- 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
 - IEC 68 2-27
 - HDD: 20G @ wall mount, half sine, 11ms
- Operating temperature: -5°C to 50°C
- Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
Limits to be at 90% RH at max 50°C
- Dimension: 457.64 x 379.24 x 61.25 mm
- Weight: 6.3kg

Certifications


- CE approval
- FCC Class A

OS Support Lists

- Windows 10 64-bit
- Windows 8 32-bit/64-bit
- Windows 7 32-bit/64-bit
- WinCE 7.0

Knowing Your APPC Series

Rear Top

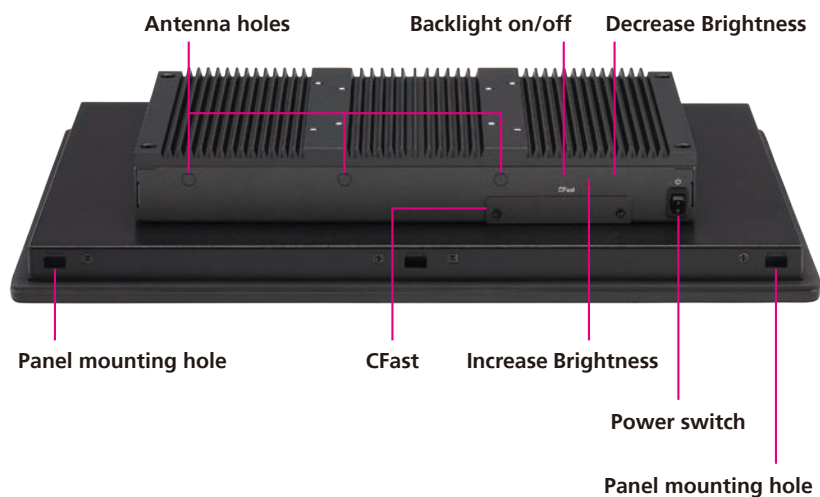

Antenna holes for optional 3.5G/Wi-Fi

The 3 external antenna holes are used to mount and connect optional 3.5G/Wi-Fi antennas.

CFast Card Socket

Used to insert a CFast card.

Power Switch

Press to power-on or power-off the panel PC.

Panel Backlight Control Buttons (Optional)

Backlight On/Off

Press to turn-on or turn-off the display


Increase Brightness

Press to increase brightness of the screen.

Decrease Brightness

Press to decrease brightness of the screen.

Rear Bottom

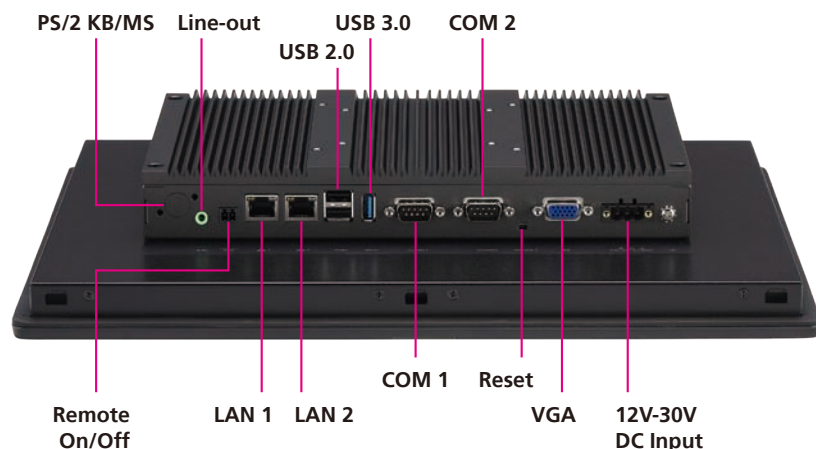

PS/2 KB/MS (Optional)

Used to connect a PS/2 keyboard or a PS/2 mouse.

Line-out

Used to connect a headphone or a speaker.

Remote On/Off Switch

Used to connect a remote to power on/off the system.

LAN 1 and LAN 2

Used to connect the system to a local area network. LAN1 supports Wake up on LAN.

USB 2.0

Used to connect USB 2.0/1.1 devices.

USB 3.0

USB 3.0 port to connect the system with USB 3.0/2.0 devices.

COM 1 and COM 2

These COM ports support RS232/422/485 compatible series device through BIOS setting, and have 2.5kV isolated protection.

Reset Button

Press this button to restart the system.


VGA

Used to connect an analog VGA monitor.

12V-30V DC Input

Used to plug a DC power cord.

Rear






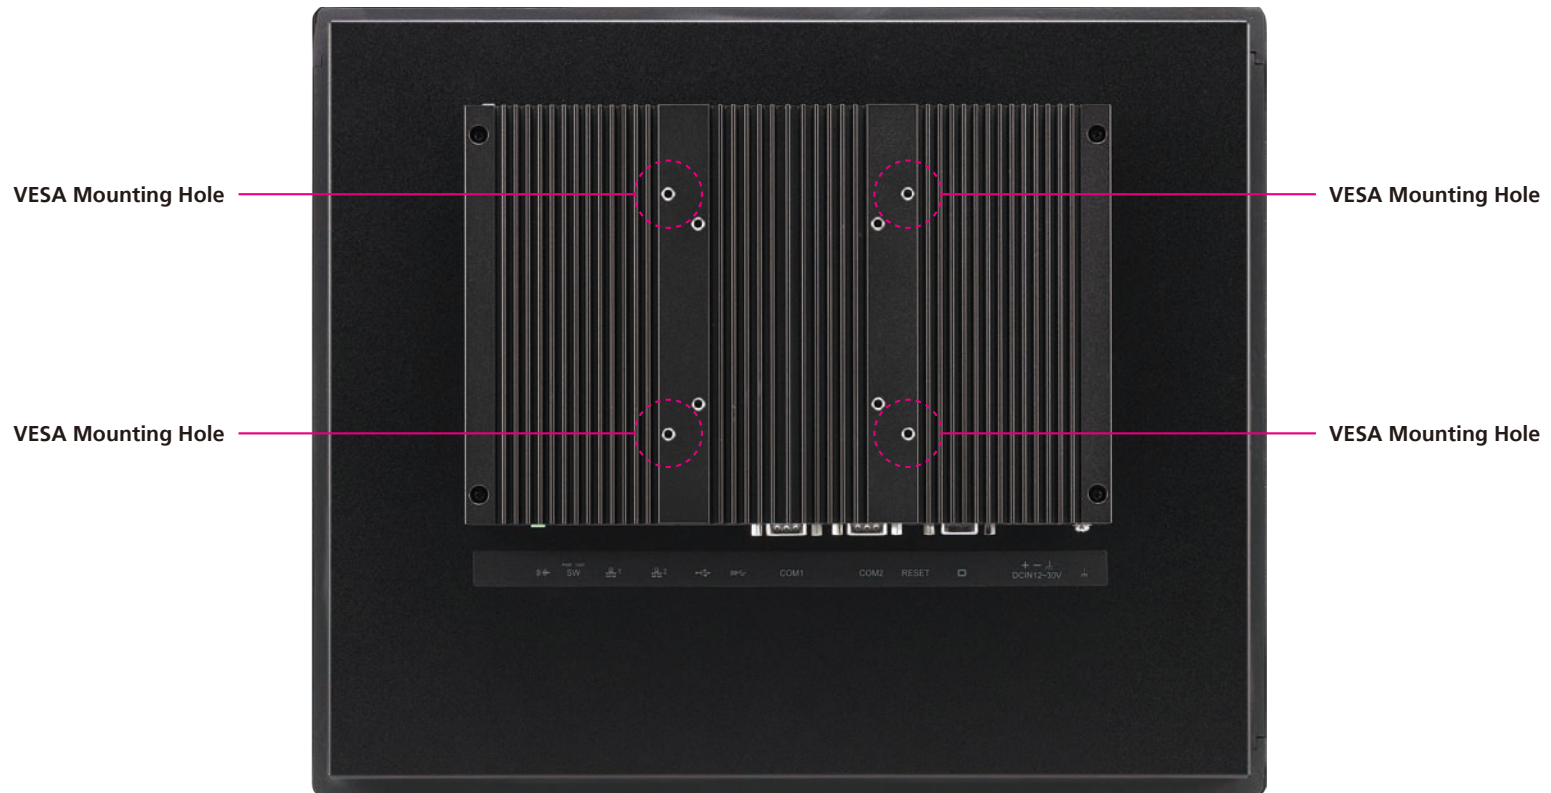


VESA Mounting Holes


These are the mounting holes for VESA mount (100x100mm)

Mechanical Dimensions

 
APPC 1240T/1245T

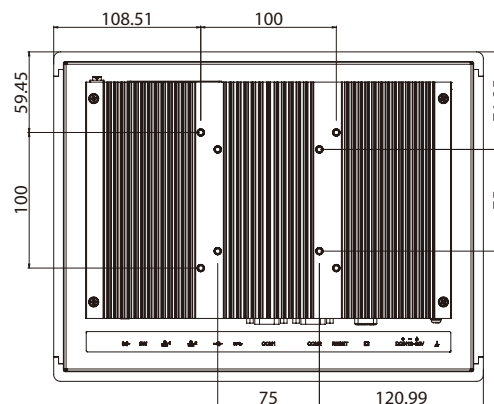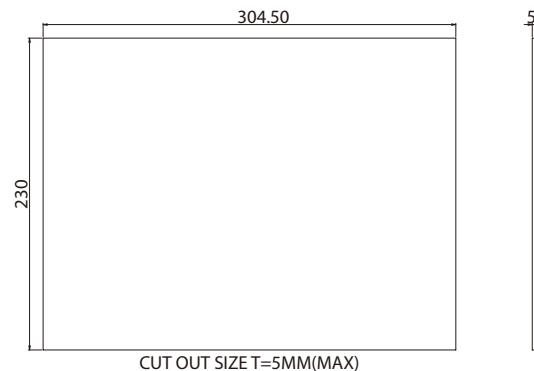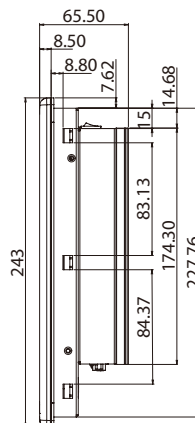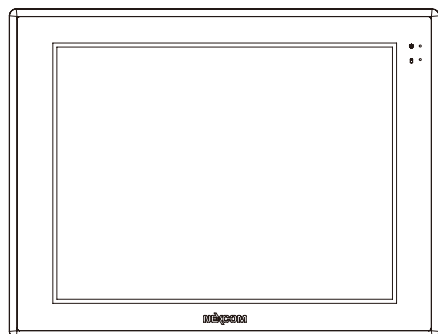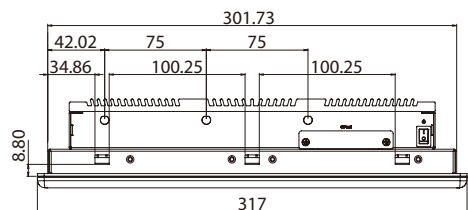

APPC 1540T

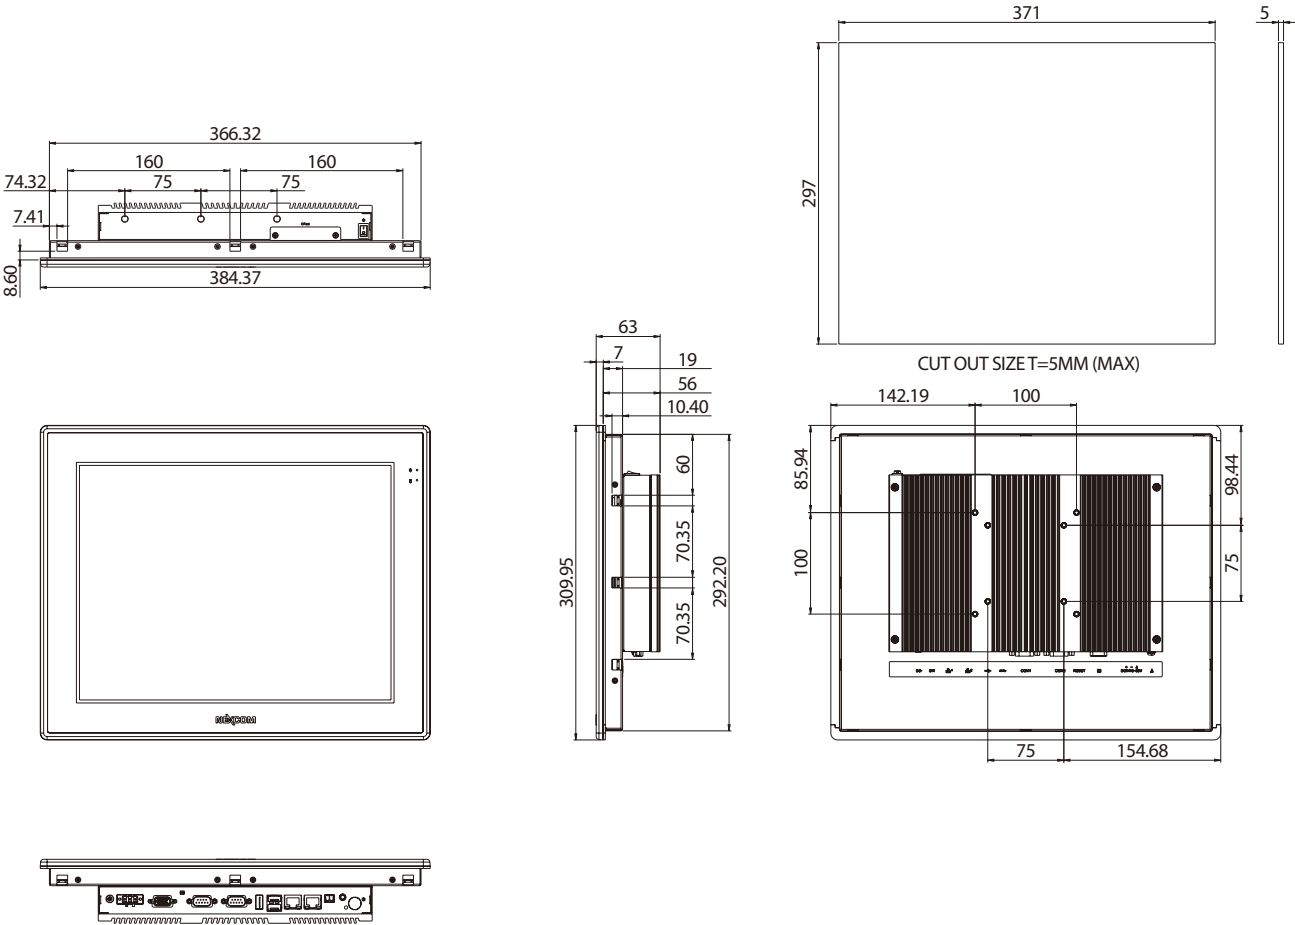

APPC 1740T

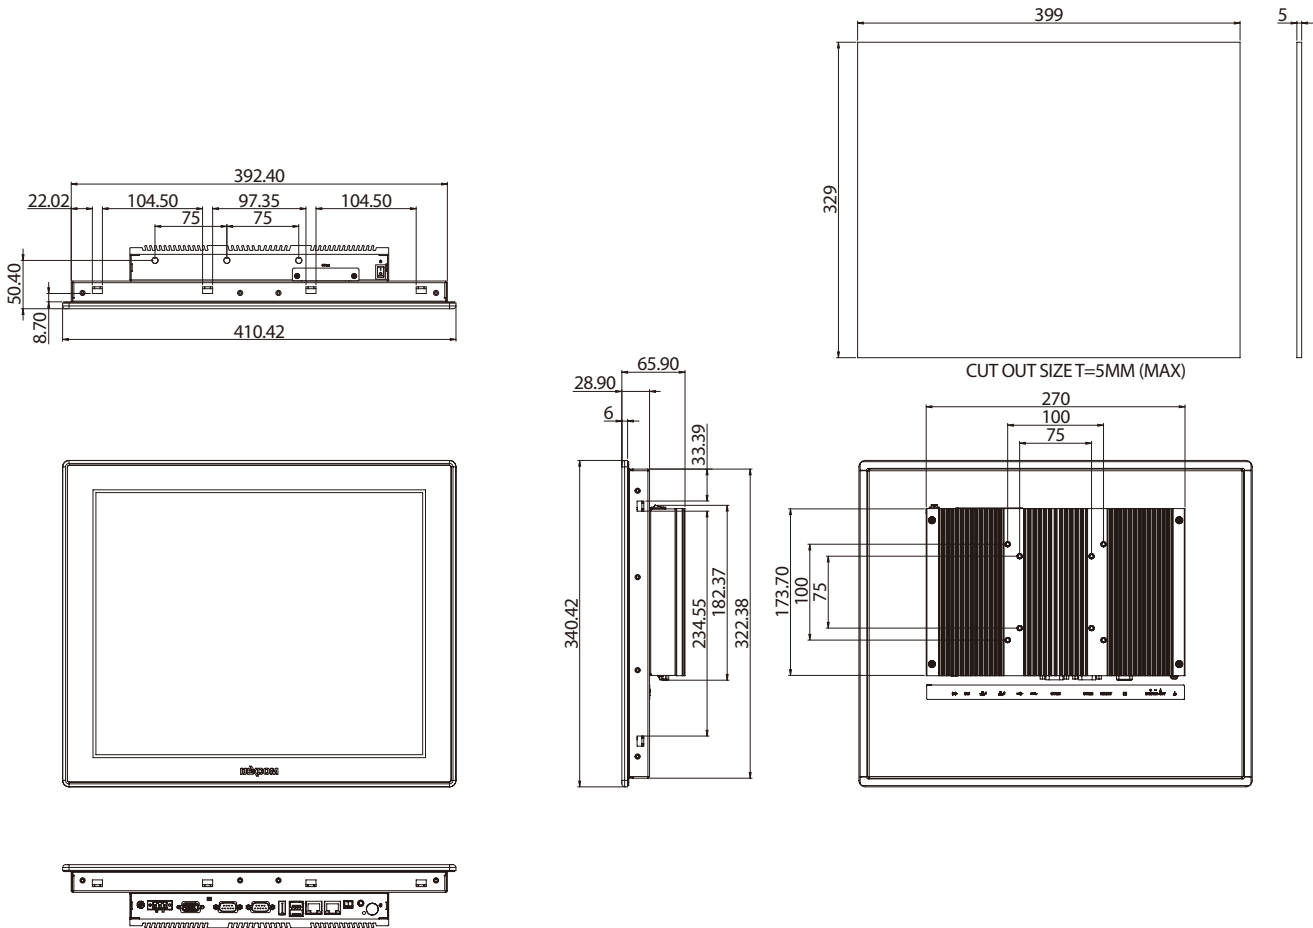

Technical drawing of the ECR 4000 monitor, showing front, top, and bottom views with dimensions in millimeters.

Front View Dimensions:


- Overall width: 431.34
- Overall height: 41.49
- Left bezel width: 106.83
- Right bezel width: 104.50
- Top bezel height: 75
- Bottom bezel height: 75
- Distance between mounting holes (left): 97.35
- Distance between mounting holes (right): 104.50

Top View Dimensions:

- Overall width: 457.64
- Overall height: 6.90

Bottom View Details:

- Bottom bezel height: 10.00
- Mounting holes: 4x Ø4.0
- Internal components: 2x 3.5" floppy disk drives, 1x 5.25" floppy disk drive, 1x 3.5" hard drive, 1x 3.5" CD-ROM drive, 1x 3.5" DVD-ROM drive, 1x 3.5" SuperDisk drive, 1x 3.5" Zip drive, 1x 3.5" Jaz drive, 1x 3.5" LS-120 drive, 1x 3.5" LS-100 drive, 1x 3.5" LS-80 drive, 1x 3.5" LS-60 drive, 1x 3.5" LS-40 drive, 1x 3.5" LS-20 drive, 1x 3.5" LS-10 drive, 1x 3.5" LS-5 drive, 1x 3.5" LS-2.5 drive, 1x 3.5" LS-1.5 drive, 1x 3.5" LS-0.5 drive, 1x 3.5" LS-0.25 drive, 1x 3.5" LS-0.125 drive, 1x 3.5" LS-0.0625 drive, 1x 3.5" LS-0.03125 drive, 1x 3.5" LS-0.015625 drive, 1x 3.5" LS-0.0078125 drive, 1x 3.5" LS-0.00390625 drive, 1x 3.5" LS-0.001953125 drive, 1x 3.5" LS-0.0009765625 drive, 1x 3.5" LS-0.00048828125 drive, 1x 3.5" LS-0.000244140625 drive, 1x 3.5" LS-0.0001220703125 drive, 1x 3.5" LS-0.00006103515625 drive, 1x 3.5" LS-0.000030517578125 drive, 1x 3.5" LS-0.0000152587890625 drive, 1x 3.5" LS-0.00000762939453125 drive, 1x 3.5" LS-0.000003814697265625 drive, 1x 3.5" LS-0.0000019073486328125 drive, 1x 3.5" LS-0.00000095367431640625 drive, 1x 3.5" LS-0.000000476837158203125 drive, 1x 3.5" LS-0.0000002384185791015625 drive, 1x 3.5" LS-0.00000011920928955078125 drive, 1x 3.5" LS-0.000000059604644775390625 drive, 1x 3.5" LS-0.0000000298023223876953125 drive, 1x 3.5" LS-0.00000001490116119384765625 drive, 1x 3.5" LS-0.000000007450580596923828125 drive, 1x 3.5" LS-0.0000000037252902984619140625 drive, 1x 3.5" LS-0.00000000186264514923095703125 drive, 1x 3.5" LS-0.000000000931322574615478515625 drive, 1x 3.5" LS-0.0000000004656612873077392578125 drive, 1x 3.5" LS-0.00000000023283064365386962890625 drive, 1x 3.5" LS-0.000000000116415321826934814453125 drive, 1x 3.5" LS-0.0000000000582076609134674071875 drive, 1x 3.5" LS-0.00000000002910383045673370359375 drive, 1x 3.5" LS-0.000000000014551915228366851796875 drive, 1x 3.5" LS-0.0000000000072759576141834258984375 drive, 1x 3.5" LS-0.00000000000363797880709171294921875 drive, 1x 3.5" LS-0.000000000001818989403545856474609375 drive, 1x 3.5" LS-0.0000000000009094947017729282373046875 drive, 1x 3.5" LS-0.00000000000045474735088646411865234375 drive, 1x 3.5" LS-0.000000000000227373675443232059326171875 drive, 1x 3.5" LS-0.0000000000001136868377216160296630859375 drive, 1x 3.5" LS-0.00000000000005684341886080801483154296875 drive, 1x 3.5" LS-0.000000000000028421709430404007415771484375 drive, 1x 3.5" LS-0.0000000000000142108547152020037078857421875 drive, 1x 3.5" LS-0.00000000000000710542735760100185394287109375 drive, 1x 3.5" LS-0.000000000000003552713678800500926971435546875 drive, 1x 3.5" LS-0.0000000000000017763568394002504634857177234375 drive, 1x 3.5" LS-0.00000000000000088817841970012523174285886171875 drive, 1x 3.5" LS-0.000000000000000444089209850062615871429430859375 drive, 1x 3.5" LS-0.0000000000000002220446049250313079357147154296875 drive, 1x 3.5" LS-0.00000000000000011102230246251565396785735771484375 drive, 1x 3.5" LS-0.000000000000000055511151231257826983928678857421875 drive, 1x 3.5" LS-0.0000000000000000277555756156289134919643394287109375 drive, 1x 3.5" LS-0.00000000000000001387778780781445674598216971484375 drive, 1x 3.5" LS-0.000000000000000006938893903907228372991084857421875 drive, 1x 3.5" LS-0.0000000000000000034694469519536141864955424287109375 drive, 1x 3.5" LS-0.00000000000000000173472347597680709324777121484375 drive, 1x 3.5" LS-0.000000000000000000867361737988403546623885607421875 drive, 1x 3.5" LS-0.0000000000000000004336808689942017733119428037109375 drive, 1x 3.5" LS-0.0000000000000000002168404344971008866559714018546875 drive, 1x 3.5" LS-0.00000000000000000010842021724855044332798570092734375 drive, 1x 3.5" LS-0.000000000000000000054210108624275221663992850463671875 drive, 1x 3.5" LS-0.0000000000000000000271050543121376108319964252318359375 drive, 1x 3.5" LS-0.00000000000000000001355252715606880541599821261591796875 drive, 1x 3.5" LS-0.000000000000000000006776263578034402707999106307958984375 drive, 1x 3.5" LS-0.0000000000000000000033881317890172013539995531539794921875 drive, 1x 3.5" LS-0.00000000000000000000169406589450860067699977657698974609375 drive, 1x 3.5" LS-0.000000000000000000000847032947254300338499888288494873046875 drive, 1x 3.5" LS-0.0000000000000000000004235164736271501692499441442474365234375 drive, 1x 3.5" LS-0.00000000000000000000021175823681357508462497207212371826171875 drive, 1x 3.5" LS-0.000000000000000000000105879118406787542312486036061859130859375 drive, 1x 3.5" LS-0.00000000000000000000005293955920339

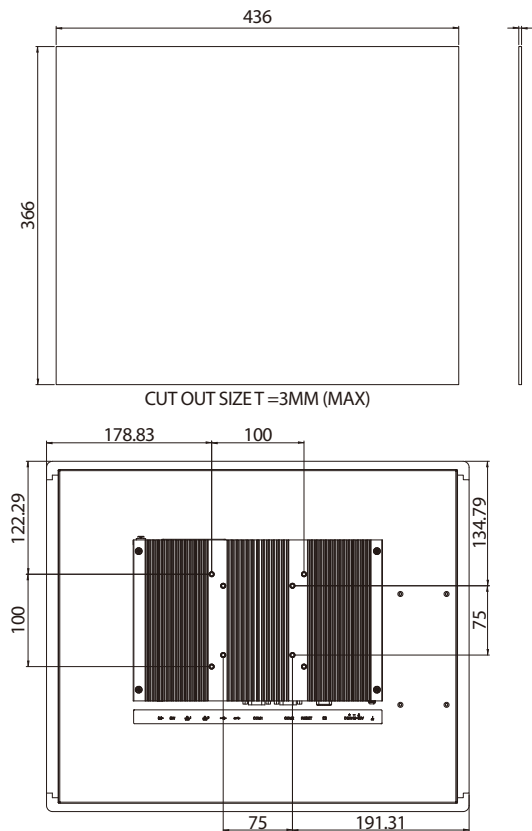

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the motherboard. Note that information in this chapter applies to APPC 1240T/1245T/1540T/1740T/1940T.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic

components. Humid environments tend to have less static electricity than dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation. Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

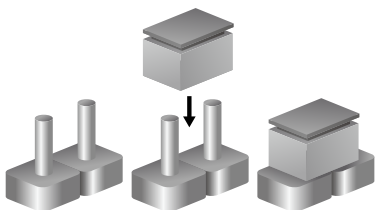


Three-Pin Jumpers: Pins 1 and 2 are Short

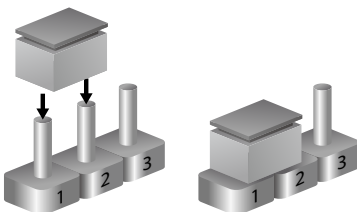


Locations of the Jumpers and Connectors

Top View

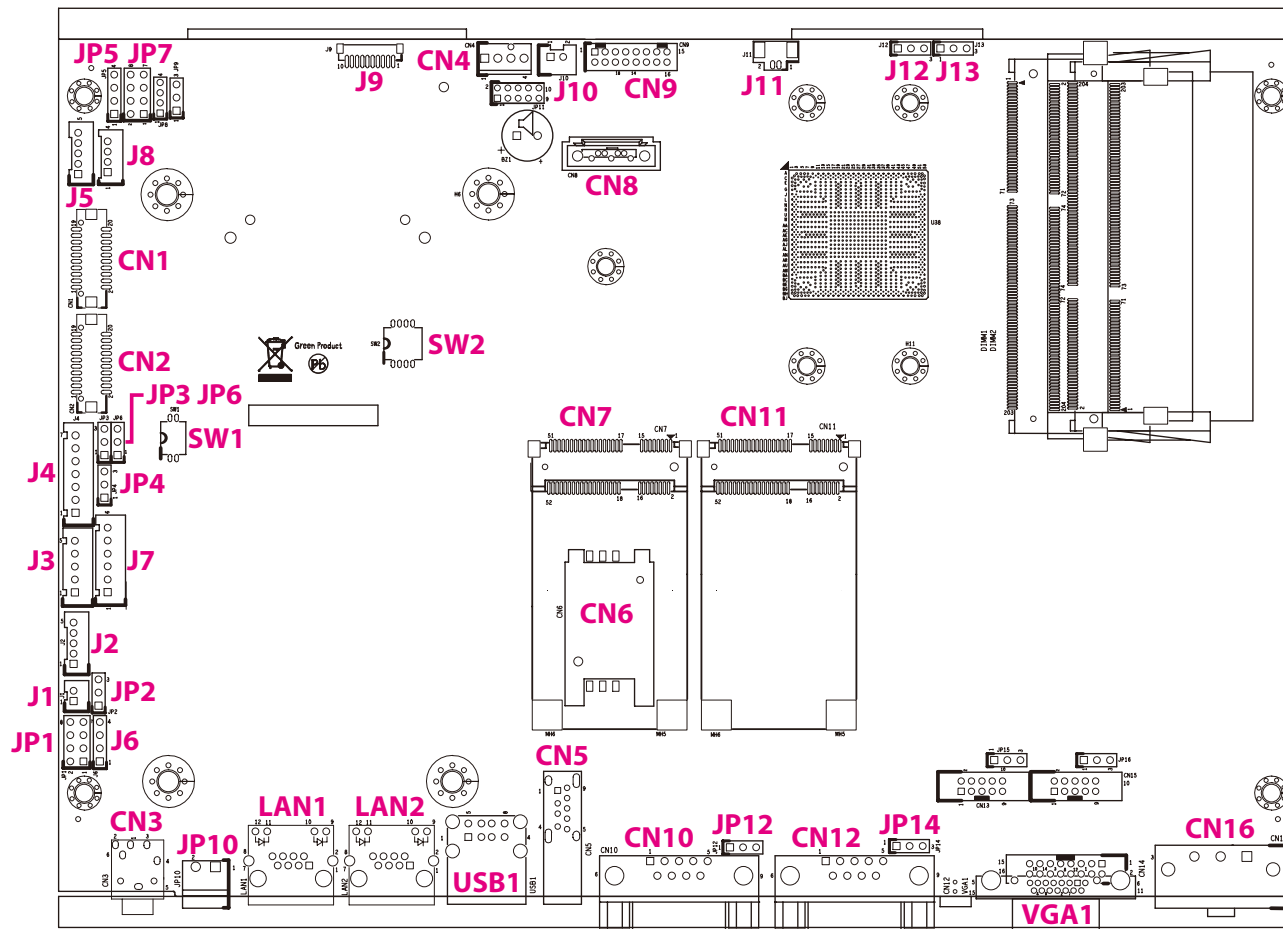

Bottom View

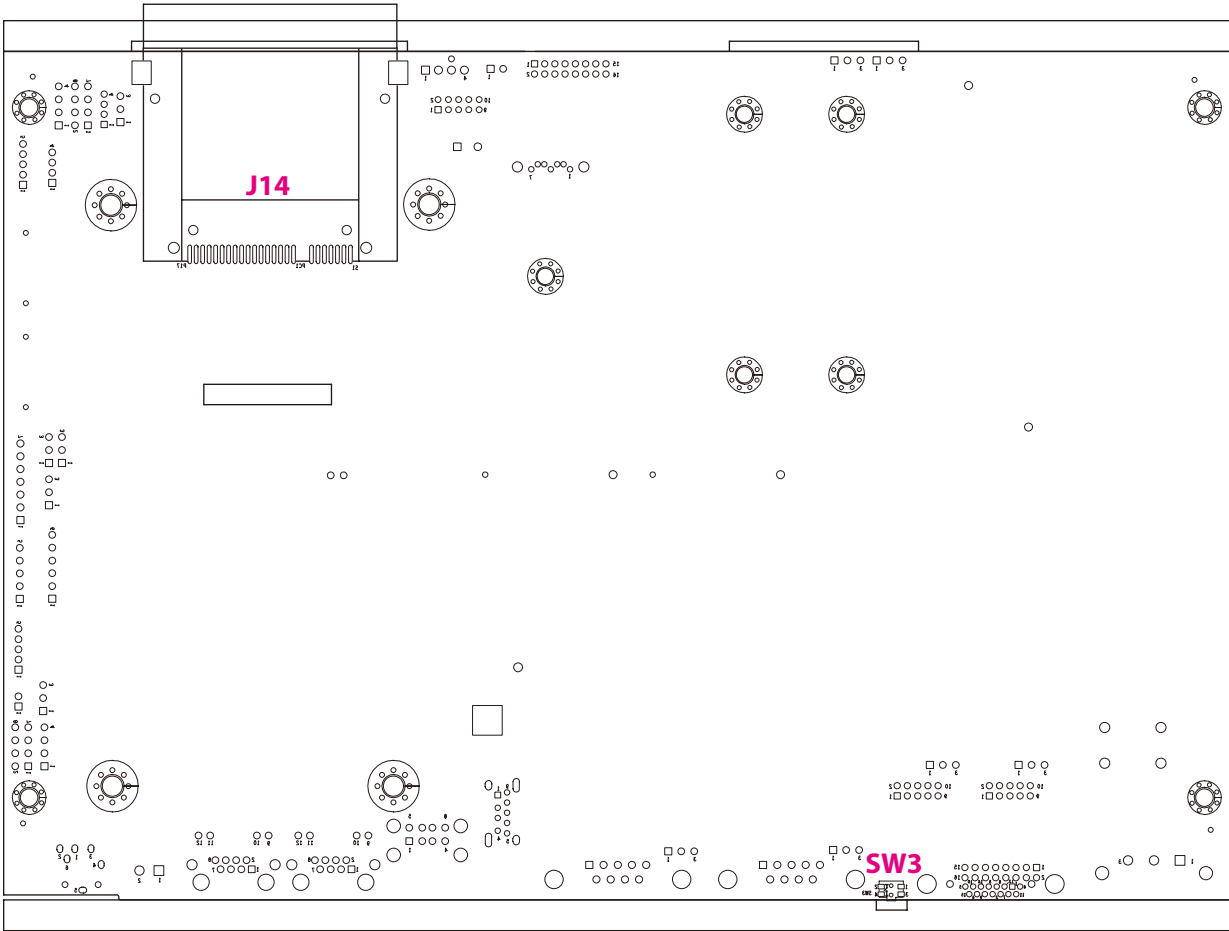



Jumpers and DIP Switch Settings

RTC and SRTC Clear Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: J12 (RTC) and J13 (SRTC)



| Pin | Settings |
|--------|----------|
| 1-2 On | Normal |
| 2-3 On | Clear |

1-2 On: default

| Pin | Definition |
|-----|------------|
| 1 | NC |
| 2 | RTC Power |
| 3 | GND |

AT/ATX Power Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP2



| Pin | Settings |
|--------|----------|
| 1-2 On | AT Mode |
| 2-3 On | ATX Mode |

2-3 On: default

| Pin | Definition |
|-----|--------------------|
| 1 | AUTO (AT MODE) |
| 2 | PWRBT In |
| 3 | Manual (ATX MODE) |



Dimming Signal Level Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP6



| Pin | Settings | Model |
|--------|----------|--------------------------|
| 1-2 On | 3.3V | APPC 1240T APPC 1940T |
| 2-3 On | 5V | APPC 1540T APPC 1740T |

1-2 On: default

| Pin | Definition |
|-----|-------------------|
| 1 | VCC3 |
| 2 | Power for Dimming |
| 3 | VCC5 |

LCD Panel VDD Power Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP3



| Pin | Settings | Model |
|--------|----------|--------------------------|
| 1-2 On | 3.3V | APPC 1240T APPC 1540T |
| 2-3 On | 5V | APPC 1740T APPC 1940T |

1-2 On: default

| Pin | Definition |
|-----|---------------|
| 1 | VCC3 |
| 2 | Power for VDD |
| 3 | VCC5 |



Touch 4/5 Wire Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP4



| Pin | Settings |
|--------|----------|
| 1-2 On | 5 wire |
| 2-3 On | 4 wire |

1-2 On: default

COM1 RI Pin Power Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP12



| Pin | Settings |
|--------|----------|
| 1-2 On | RING |
| 2-3 On | +5V |

1-2 On: default

| Pin | Definition |
|-----|------------|
| 1 | SP1_RI |
| 2 | SP1_PSRI |
| 3 | VCC5 |





COM2 RI Pin Power Select

Connector type: 1x3 3-pin header, 2.54mm pitch
Connector location: JP14




| Pin | Settings |
|--------|----------|
| 1-2 On | RING |
| 2-3 On | +12V |

1-2 On: default

| Pin | Definition |
|-----|------------|
| 1 | SP2_RI |
| 2 | SP2_PSRI |
| 3 | 12V |

Panel Resolution Select

Connector type: 4-pin DIP switch
Connector location: SW2

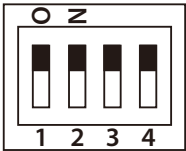

| Resolution | SW2-1 | SW2-2 | SW2-3 | SW2-4 | Model |
|-------------|-------|-------|-------|-------|--------------------------|
| 800 x 600 | ON | ON | ON | ON | APPC 1240T |
| 1024 x 768 | ON | OFF | ON | ON | APPC 1540T |
| 1280 x 1024 | OFF | ON | ON | OFF | APPC 1740T APPC 1940T |

 




Dimming Type Select

Connector type: 2-pin DIP switch

Connector location: SW1



| TYPE | SW1-1 | SW1-2 |
|-------------|-------|-------|
| PWM Mode | ON | OFF |
| Analog Mode | OFF | ON |



Connector Pin Definitions

External I/O Interfaces

Line-out Connector

Connector type: 1x 3.5mm TRS
Connector location: CN3



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LOUT_R | 2 | JD |
| 3 | NC | 4 | LOUT_L |
| 5 | GND | 6 | GND |

Remote Power On/Off Switch

Connector type: 2-pin switch
Connector location: JP10




| Pin | Definition |
|-----|------------|
| 1 | PWRBT |
| 2 | GND |

LAN1 Port

Support Wake on LAN (WOL)

Connector type: RJ45 port with LEDs

Connector location: LAN1

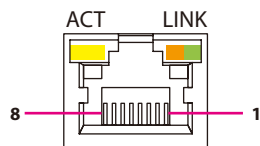

| Act | Status |
|-----------------|---------------|
| Flashing Yellow | Data activity |
| Off | No activity |


| Link | Status |
|---------------|----------------------|
| Steady Green | 1G network link |
| Steady Orange | 100Mbps network link |
| Off | 10Mbps or no link |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LAN1M0P | 2 | LAN1M0N |
| 3 | LAN1M1P | 4 | LAN1M2P |
| 5 | LAN1M2N | 6 | LAN1M1N |
| 7 | LAN1M3P | 8 | LAN1M3N |

LAN2 Port

Connector type: RJ45 port with LEDs

Connector location: LAN2

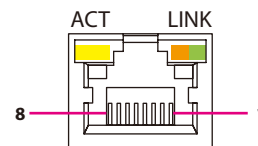


| Act | Status |
|-----------------|---------------|
| Flashing Yellow | Data activity |
| Off | No activity |

| Link | Status |
|---------------|----------------------|
| Steady Green | 1G network link |
| Steady Orange | 100Mbps network link |
| Off | 10Mbps or no link |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LAN2M0P | 2 | LAN2M0N |
| 3 | LAN2M1P | 4 | LAN2M2P |
| 5 | LAN2M2N | 6 | LAN2M1N |
| 7 | LAN2M3P | 8 | LAN2M3N |

Dual USB 2.0 Port


Connector type: USB 2.0 ports, Type A
Connector location: USB1

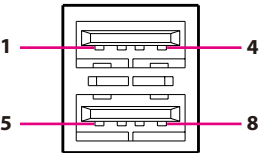

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | VCC5 | 2 | USB 2N |
| 3 | USB 2P | 4 | GND |
| 5 | VCC5 | 6 | USB 1N |
| 7 | USB 1P | 8 | GND |

Single USB 3.0 Port

 Connector type: USB 3.0 port, Type A
Connector location: CN5




| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | VCC5 | 2 | USB 0N |
| 3 | USB 0P | 4 | GND |
| 5 | USB3_RX0_N | 6 | USB3_RX0_P |
| 7 | GND | 8 | USB3_TX0_N |
| 9 | USB3_TX0_P | | |

COM1 Port

Connector type: DB-9 port, 9-pin D-Sub

 Connector location: CN10




| Pin | RS232 | RS422 | RS485 |
|-----|--|--|--|
| 1 | COM1_DCD | COM1_TXD- | COM1_TXD- COM1_RXD- |
| 2 | COM1_RXD | COM1_TXD+ | COM1_TXD+ COM1_RXD+ |
| 3 | COM1_TXD | COM1_RXD+ | Reserve |
| 4 | COM1_DTR | COM1_RXD- | Reserve |
| 5 | COM1_GND | COM1_GND | Reserve |
| 6 | COM1_DSR | COM1_RTS- | Reserve |
| 7 | COM1_RTS | COM1_RTS+: | Reserve |
| 8 | COM1_CTS | COM1_CTS+ | Reserve |
| 9 | COM1_RI (Could be a +5V Power Pin) | COM1_CTS- (Could be a +5V Power Pin) | Reserve (Could be a +5V Power Pin) |

COM2 Port

Connector type: DB-9 port, 9-pin D-Sub

 Connector location: CN12




| Pin | RS232 | RS422 | RS485 |
|-----|---|---|---|
| 1 | COM2_DCD | COM2_TXD- | COM2_TXD- COM2_RXD- |
| 2 | COM2_RXD | COM2_TXD+ | COM2_TXD+ COM2_RXD+ |
| 3 | COM2_TXD | COM2_RXD+ | Reserve |
| 4 | COM2_DTR | COM2_RXD- | Reserve |
| 5 | COM2_GND | COM2_GND | Reserve |
| 6 | COM2_DSR | COM2_RTS- | Reserve |
| 7 | COM2_RTS | COM2_RTS+ | Reserve |
| 8 | COM2_CTS | COM2_CTS+ | Reserve |
| 9 | COM2_RI (Could be a +12V Power Pin) | COM2_CTS- (Could be a +12V Power Pin) | Reserve (Could be a +12V Power Pin) |



VGA Port


Connector type: DB-15 port, 15-pin D-Sub
Connector location: VGA1

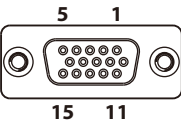

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | Red | 2 | Green |
| 3 | Blue | 4 | N/C |
| 5 | GND | 6 | GND |
| 7 | GND | 8 | GND |
| 9 | +5V | 10 | GND |
| 11 | N/C | 12 | DDC Data |
| 13 | HSYNC | 14 | VSYNC |
| 15 | DDC Clock | | |

12V - 30V DC Power Input


Connector type: Phoenix Contact 1x3 3-pin terminal block
Connector location: CN16

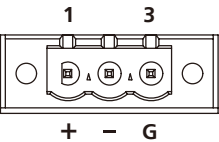

| Pin | Definition |
|-----|------------|
| 1 | DC+ |
| 2 | DC- |
| 3 | GND |

CFast Card Slot

Connector type: Standard CFast connector
Connector location: J14

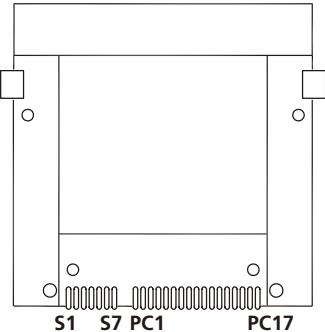

| Pin | Definition | Pin | Definition |
|------|--------------|------|--------------|
| S1 | GND | S2 | SATA_TXP2 |
| S3 | SATA_TXN2 | S4 | GND |
| S5 | SATA_RXN2 | S6 | SATA_RXP2 |
| S7 | GND | PC1 | CFAST_CDI |
| PC2 | GND | PC3 | NC |
| PC4 | NC | PC5 | NC |
| PC6 | NC | PC7 | GND |
| PC8 | CFAST_LED1_C | PC9 | CFAST_LED2_C |
| PC10 | NC | PC11 | NC |
| PC12 | NC | PC13 | VCC3 |
| PC14 | VCC3 | PC15 | GND |
| PC16 | GND | PC17 | CFAST_CDO |

Reset Button

Connector location: SW3




| Pin | Definition |
|-----|------------|
| 1 | Reset |
| 2 | Reset |
| 3 | GND |
| 4 | GND |



Internal Connectors

CCFL Panel Backlight Connector

 
Connector type: 1x7 7-pin header JST, 2.5mm pitch
Connector location: J4



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | VCC5 | 2 | 12V |
| 3 | 12V | 4 | BKCTRL |
| 5 | GND | 6 | GND |
| 7 | BKLEN | | |

LVDS Channel A

 Connector type: 2x10 20-pin header, 1.25mm pitch
Connector location: CN2



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | NC | 2 | NC |
| 3 | VDD | 4 | LVDS_DAT0P |
| 5 | LVDS_DAT3P | 6 | LVDS_DAT0N |
| 7 | LVDS_DAT3N | 8 | VDD |
| 9 | GND | 10 | LVDS_DAT1P |
| 11 | LVDS_CLK1P | 12 | LVDS_DAT1N |
| 13 | LVDS_CLK1N | 14 | GND |
| 15 | GND | 16 | +12V |
| 17 | LVDS_DAT2P | 18 | +12V |
| 19 | LVDS_DAT2N | | |

LVDS Channel B


Connector type: 2x10 20-pin header, 1.25mm pitch
Connector location: CN1



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | NC | 2 | NC |
| 3 | VDD | 4 | LVDS_DAT4P |
| 5 | LVDS_DAT7P | 6 | LVDS_DAT4N |
| 7 | LVDS_DAT7N | 8 | VDD |
| 9 | GND | 10 | LVDS_DAT5P |
| 11 | LVDS_CLK2P | 12 | LVDS_DAT5N |
| 13 | LVDS_CLK2N | 14 | GND |
| 15 | GND | 16 | +12V |
| 17 | LVDS_DAT6P | 18 | +12V |
| 19 | LVDS_DAT6N | | |

Line-in/Mic-in Connector

 Connector type: 2x4 8-pin header, 2.54mm pitch
Connector location: JP1



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LINE IN-LP | 2 | MIC1_L3 |
| 3 | LINE IN-JD | 4 | MIC_JD |
| 5 | GND | 6 | GND |
| 7 | LINE IN-RP | 8 | MIC1_R3 |



Speaker-out Connector


Connector type: 1x4 4-pin header, 2.54mm pitch
Connector location: J6



| Pin | Definition |
|-----|------------|
| 1 | OUT-L+ |
| 2 | OUT-L- |
| 3 | OUT-R+ |
| 4 | OUT-R- |

USB Connector

 Connector type: 1x6 6-pin header JST, 2.5mm pitch
Connector location: J7




| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | +5V | 2 | HUBUSB DM1 |
| 3 | HUBUSB DP1 | 4 | HUBUSB DM2 |
| 5 | HUBUSB DP2 | 6 | GND |





Touch Sensor Connector

 
Connector type: 1x5 5-pin header JST, 2.5mm pitch
Connector location: J3



| Pin | 4-wire | 5-wire |
|-----|--------|-----------|
| 1 | Bottom | UR (H) |
| 2 | Right | LR (X) |
| 3 | N/A | Sense (S) |
| 4 | Top | UL (Y) |
| 5 | Left | LL (L) |

SATA Connector

 Connector type: Standard Serial ATA 7P (1.27mm, SATA-M-180)
Connector location: CN8



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | TXP0 |
| 3 | TXN0 | 4 | GND |
| 5 | RXN0 | 6 | RXP0 |
| 7 | GND | 8 | |



SATA DOM Power Connector


Connector type: 1x2 2-pin header, JST 2.5mm pitch
Connector location: J10



| Pin | Definition |
|-----|------------|
| 1 | +5V |
| 2 | GND |

DIO Connector (Optional)

 
Connector type: 2x8 16-pin header, 2.54mm pitch
Connector location: CN9



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | DI1 | 2 | DO1 |
| 3 | DI2 | 4 | DO2 |
| 5 | DI3 | 6 | DO3 |
| 7 | DI4 | 8 | DO4 |
| 9 | NC | 10 | NC |
| 11 | COM1 | 12 | NC |
| 13 | GND | 14 | GND |
| 15 | GND | 16 | GND |

Keyboard/Mouse Connector

 Connector type: 2x4 8-pin header, 2.54mm pitch
Connector location: JP7



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | VCC5 | 2 | VCC5 |
| 3 | KB_DATA | 4 | MS_DATA |
| 5 | KB_CLK | 6 | MS_CLK |
| 7 | GND | 8 | GND |

Active LED Connector

Connector type: 1x6 6-pin header JST, 2.5mm pitch
Connector location: J2



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | HDD_GND | 2 | HDD_PWR |
| 3 | PWR_GND | 4 | 5VSB |
| 5 | VCC5 | | |



Power Button

Connector type: 1x2 2-pin header JST, 2.0mm pitch
Connector location: J1



| Pin | Definition |
|-----|------------|
| 1 | PWRBT |
| 2 | GND |

Backlight Control Input Connector

Connector type: 1x4 4-pin header JST, 2.0mm pitch
Connector location: J8



| Pin | Definition |
|-----|-------------------|
| 1 | GND |
| 2 | Tact Switch input |
| 3 | PIR IN |
| 4 | VCC3 |





Dimming Control Input Connector

Connector type: 1x5 5-pin header JST, 2.0mm pitch
Connector location: J5



| Pin | Definition | Pin | Definition |
|-----|-----------------|-----|--------------------|
| 1 | GND | 2 | Decreased input |
| 3 | Increased input | 4 | Light sensor input |
| 5 | VCC3 | | |

LVDS MCU FW Debug Connector

Connector type: 1x4 4-pin header, 2.54mm pitch
Connector location: JP5



| Pin | Definition |
|-----|------------|
| 1 | VCC3 |
| 2 | MCU_TCK |
| 3 | MCU_TDIO |
| 4 | GND |



Smart Fan Connector

Connector type: 1x4 4-pin Wafer, 2.54mm pitch
Connector location: CN4



| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | +12V |
| 3 | CPUFANIN |
| 4 | CPUFANOUT |

Battery Connector

Connector type: 1x2 2-pin header JST, 1.25mm pitch
Connector location: J11



| Pin | Definition |
|-----|------------|
| 1 | VBAT |
| 2 | GND |

Post Code Debug Connector


Connector type: 1x10 10-pin header, 1.0mm pitch
Connector location: J9



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | PLTRST# |
| 3 | LPC_CLK | 4 | LPC_FRAME# |
| 5 | LPC_AD3 | 6 | LPC_AD2 |
| 7 | LPC_AD1 | 8 | LPC_AD0 |
| 9 | VCC3 | 10 | VCC3 |

SIM Card Slot


Connector location: CN6

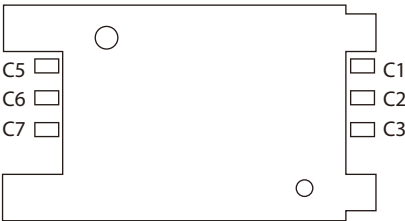

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| C 1 | UIM_PWR | C2 | UIM_RST |
| C3 | UIM_CLK | C5 | GND |
| C6 | UIM_VCCP | C7 | UIM_DAT |

Mini-PCIe Slot

Connector location: CN11

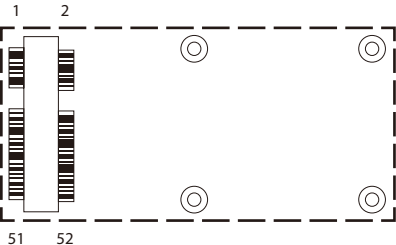


| Pin | Definition | Pin | Definition |
|-----|------------|-----|----------------|
| 1 | WAKE0# | 2 | +V3.3_MINI |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | +V1.5S_MINI |
| 7 | NC | 8 | NC |
| 9 | GND | 10 | NC |
| 11 | GPP_CLK1_N | 12 | NC |
| 13 | GPP_CLK1_P | 14 | NC |
| 15 | GND | 16 | NC |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | MINICARD1_DIS# |
| 21 | GND | 22 | PCIE_RST# |
| 23 | PCIE_RX2N | 24 | +V3.3A_MINI |
| 25 | PCIE_RX2P | 26 | GND |

| Pin | Definition | Pin | Definition |
|-----|-------------|-----|-------------|
| 27 | GND | 28 | +V1.5S_MINI |
| 29 | GND | 30 | SMB_CLK |
| 31 | PCIE_TX3N | 32 | SMB_DAT |
| 33 | PCIE_TX3P | 34 | GND |
| 35 | GND | 36 | USB_1N |
| 37 | GND | 38 | USB_1P |
| 39 | +V3.3A_MINI | 40 | GND |
| 41 | +V3.3A_MINI | 42 | NC |
| 43 | GND | 44 | NC |
| 45 | NC | 46 | NC |
| 47 | NC | 48 | +V1.5S_MINI |
| 49 | NC | 50 | GND |
| 51 | NC | 52 | +V3.3A_MINI |

Mini-PCle Slot (Wi-Fi/3G)


Connector location: CN7

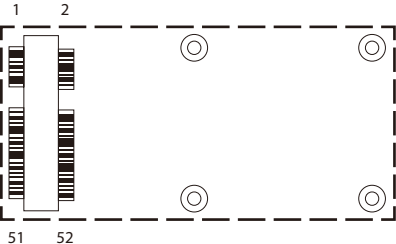

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | PCIEWAKE | 2 | 3.3V |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | 1.5V |
| 7 | CLKREQ | 8 | UIM_PWR |
| 9 | GND | 10 | UIM_DAT |
| 11 | PCIECLKN | 12 | UIM_CLK |
| 13 | PCIECLKP | 14 | UIM_RST |
| 15 | GND | 16 | UIM_VCCP |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | DISABLE |
| 21 | GND | 22 | PLTRSTBF |
| 23 | PCIERX4N | 24 | 3.3V |
| 25 | PCIERX24P | 26 | GND |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 27 | GND | 28 | 1.5V |
| 29 | GND | 30 | SMBCLK |
| 31 | PCIETX4N | 32 | SMBDATA |
| 33 | PCIETX4P | 34 | GND |
| 35 | GND | 36 | USB2N |
| 37 | GND | 38 | USB2P |
| 39 | 3.3V | 40 | GND |
| 41 | 3.3V | 42 | NC |
| 43 | GND | 44 | NC |
| 45 | NC | 46 | NC |
| 47 | NC | 48 | 1.5V |
| 49 | NC | 50 | GND |
| 51 | NC | 52 | 3.3V |

Block Diagram

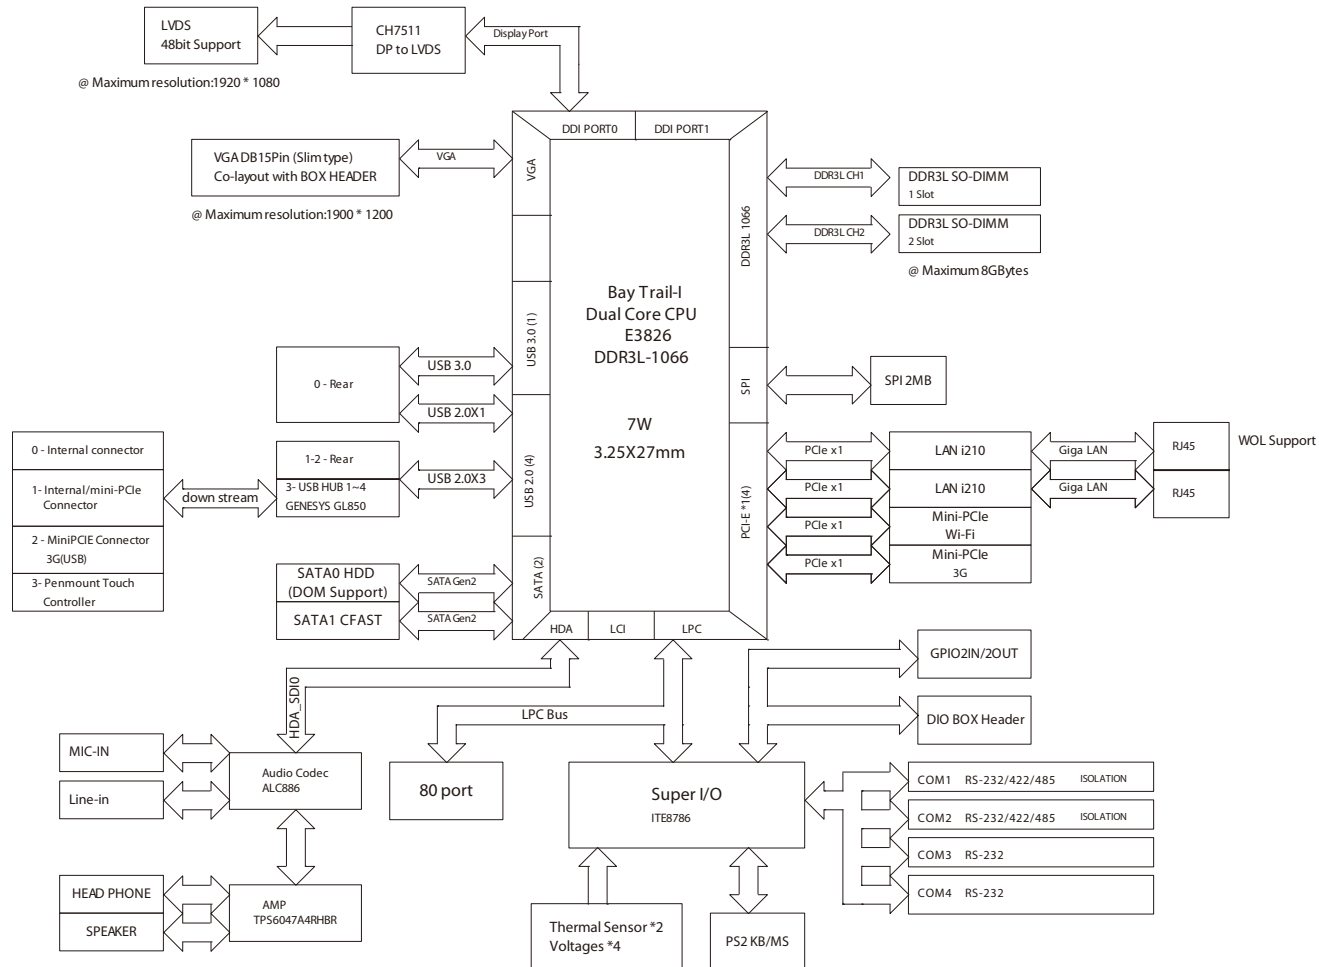

CHAPTER 3: SYSTEM SETUP

Installing a SATA Hard Drive




Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. Remove the mounting screws around the chassis cover and then remove the cover.




The dots denote the locations of the screws.


2. Remove the mounting screws of the drive bay.

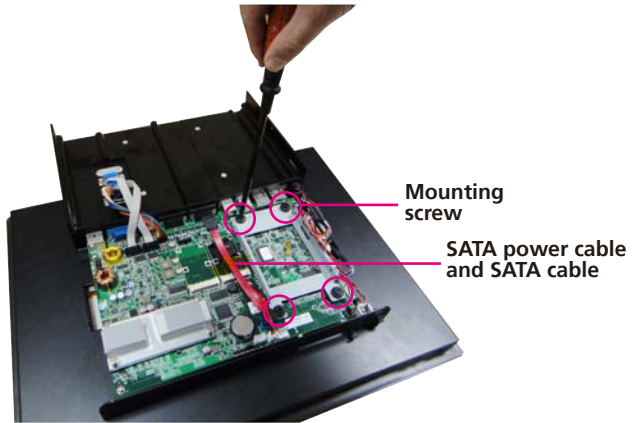


3. Remove the drive bay. The drive bay is used to hold a SATA hard drive.

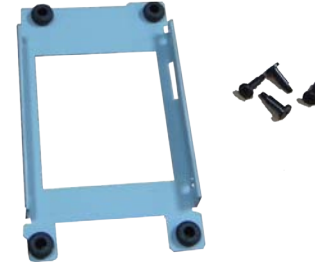

4. Place the SATA hard drive on the drive bay.

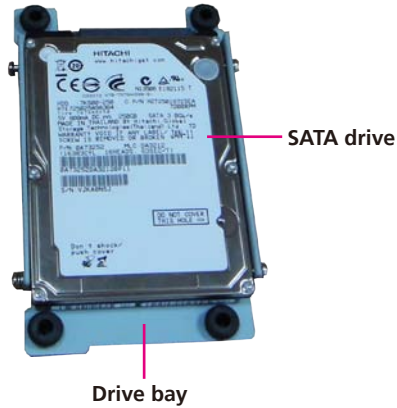


5. Align the mounting holes that are on the sides of the SATA drive with the mounting holes on the drive bay and then use the provided mounting screws to secure the drive in place.

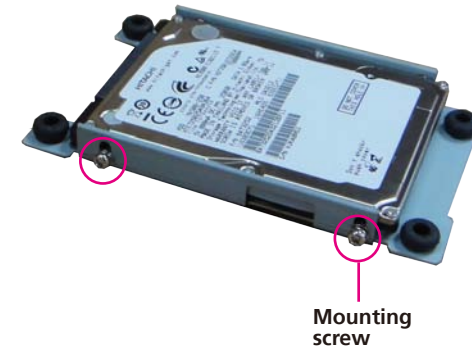

6. Place the SATA drive in the chassis and then use the provided mounting screws to secure the drive in the chassis.

Connect the SATA data cable and SATA power cable to the connectors on the SATA drive.

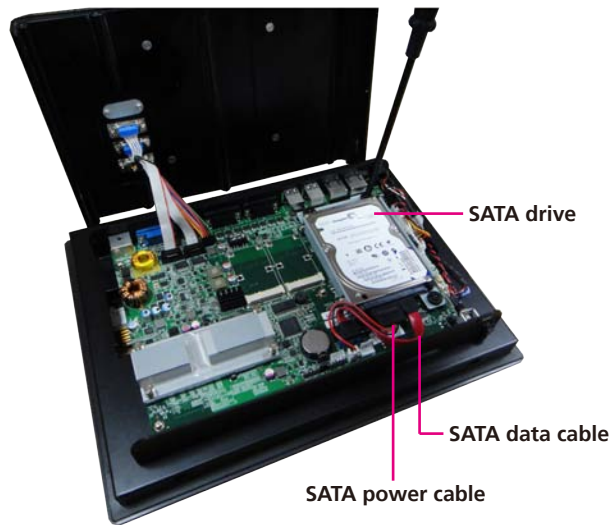


Installing a CFast Card

1. The CFast card socket is located on the rear top side of the chassis.




CFast card socket

2. Remove the mounting screws on the cover of the CFast socket.

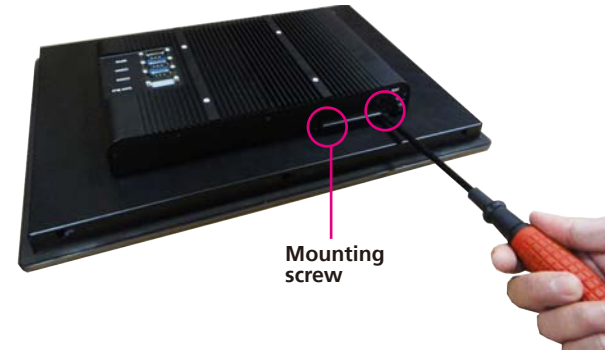

Mounting screw

3. With the label of the CFast card facing up, insert the card until it is completely seated in the socket.

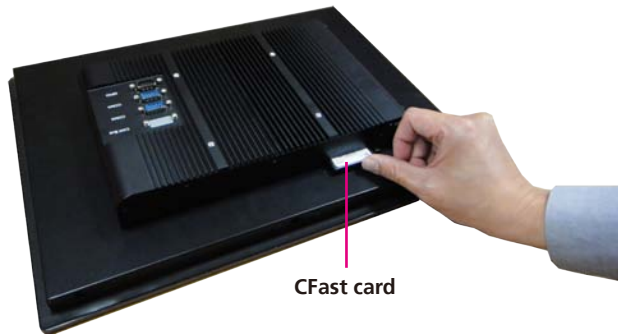

4. Push the CFast card to remove it.




Installing a SO-DIMM


1. Remove the mounting screws around the chassis cover and then remove the cover.




2. Locate the SO-DIMM socket on the left side of the chassis as circled below, where you can install a SO-DIMM module.

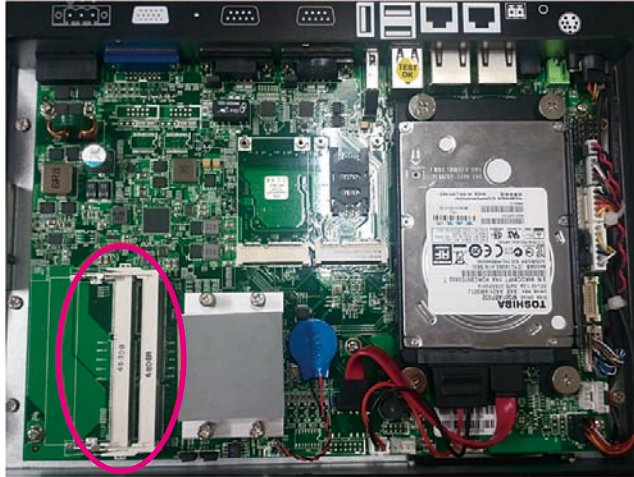

3. Insert the module into the socket at an approximately 30 degrees angle. Apply firm even pressure to each end of the module until it slips into the socket. The gold-plated connector on the edge of the module will almost completely disappear inside the socket.

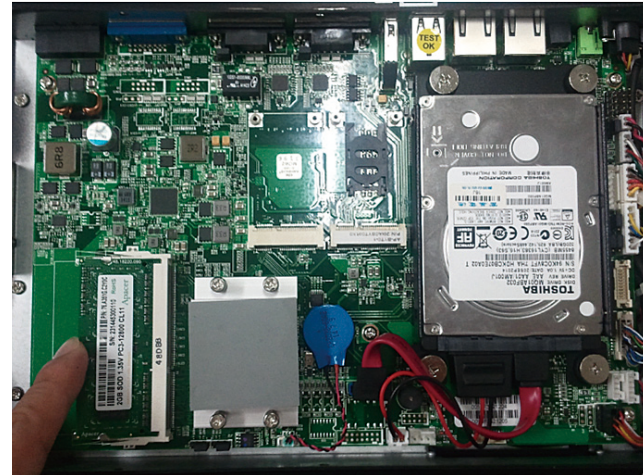


4. Push the module down until the clips on both sides of the socket lock into position. You will hear a distinctive “click” sound, indicating the module is correctly locked into position.

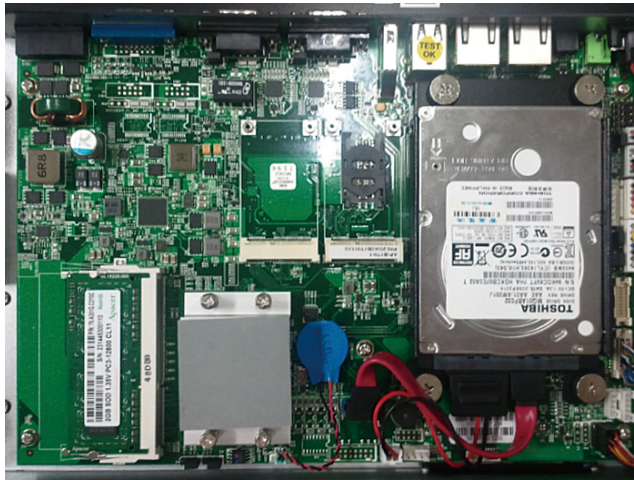


Installing a SATA DOM (Half-Size Only)



1. Remove the screw on the front of the SATA port.

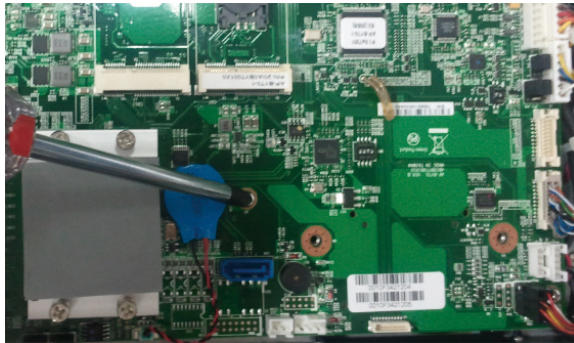

2. The SATA DOM package includes a supporting stud. The stud is used to stabilize the SATA DOM module.

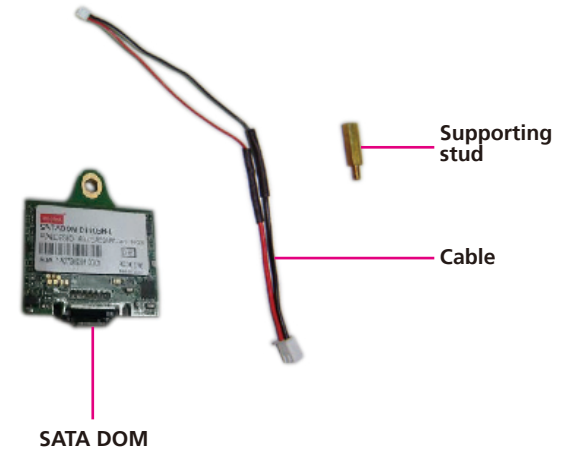

3. Install the supporting stud. Make sure the stud is fastened in place.

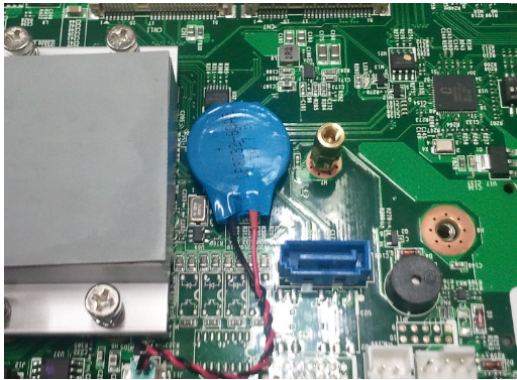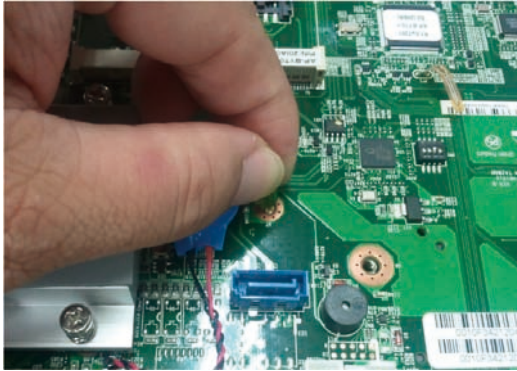

4. Connect one end of the provided cable to the connector on the module.



5. Install the module to the SATA port via the connector at the solder side of the module and then secure the module using the mounting screw you removed in step 1.



6. Connect the other end of the provided cable to the connector on the main board.



Installing a Mini PCIe Module

The Mini PCIe module package includes the following items:

RALINK 802.11b/g/n 2T3R wireless mini card module kit QCOM:Q802XKN



Mini PCIe Module



Antennas



RF Cables

3.5G module kit Sierra Wireless MC8790V




802.11b/g QN-MU-A0028 wireless mini card module kit
INTEL112.BNHHMWG



If you are installing the 802.11b/g QN-MU-A0028 wireless mini card module (half-size), before proceeding with the installation, please assemble the Wi-Fi module bracket first by following the instructions below:


1. Align the mounting holes on the Wi-Fi mini card module to the mounting holes on the Wi-Fi module bracket.

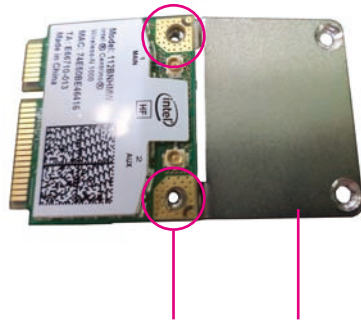

Mounting holes


Wi-Fi module bracket

2. Tighten screws onto the mounting holes to secure the bracket.

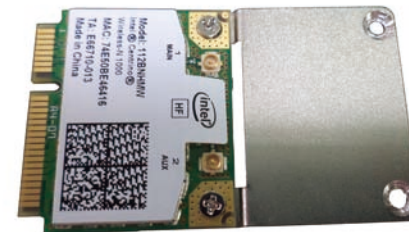

Installing the Half-Size Mini PCIe Module

1. Insert the Mini PCIe module into the Mini PCIe slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.
2. Secure the module with mounting screws.

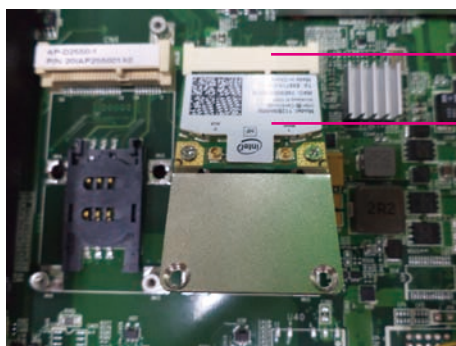

Mini PCIe slot


Mini PCIe module



3. Please go to step 3 on page 69 to proceed.

Installing the Full-Size Mini PCIe Module

1. Insert the Mini PCIe module into the Mini PCIe slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.

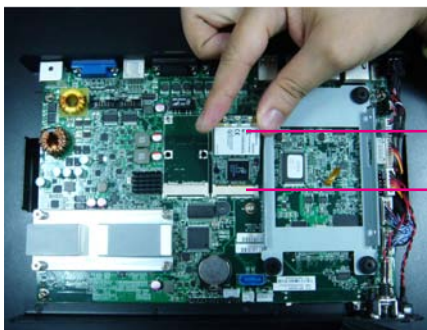


Mini PCIe module


Mini PCIe slot

2. Secure the module with mounting screws.


Mounting screw

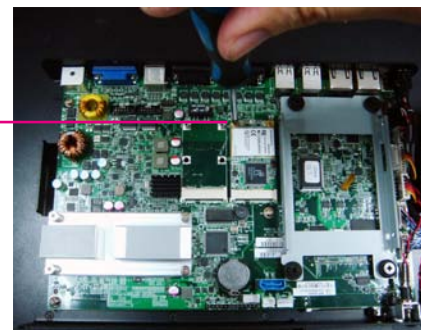

Mounting screw

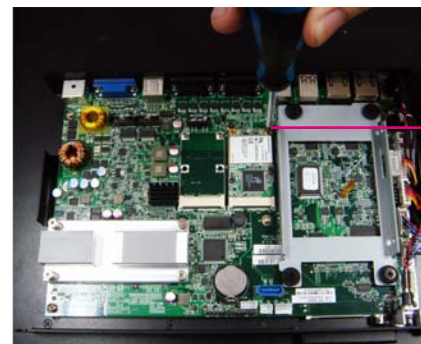


3. Attach one end of the RF cables onto the module.

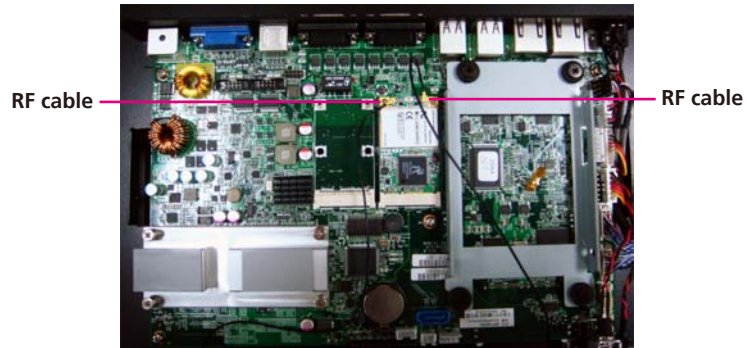


4. Push the antenna hole cover.



5. Remove the antenna hole covers.

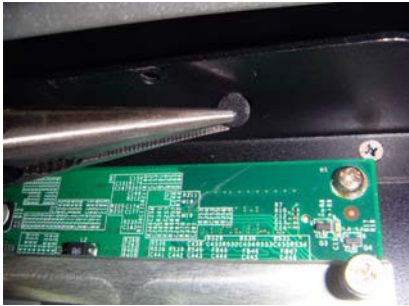



6. Insert the antenna jack end of the cable through the antenna hole.

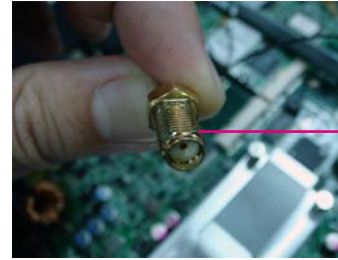

Antenna jack
end of the cable



7. Insert the ring onto the antenna jack end of the cable.

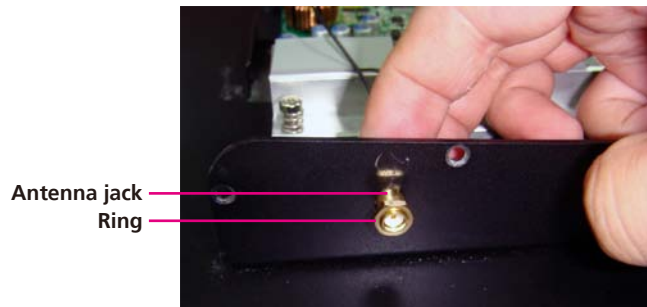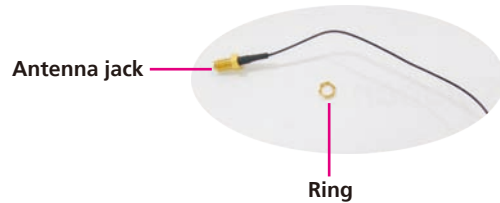

8. Connect external antennas to the antenna jacks.




Placing Panel Mount Hole Blocks

Panel mount hole blocks can be used to cover the panel mount openings on the chassis to prevent dust invasion. You can also choose to cover the panel mount holes when VESA mount is used.

1. Locate the panel mount openings on the chassis.



2. Insert the hole block into the opening until it is pushed in completely.

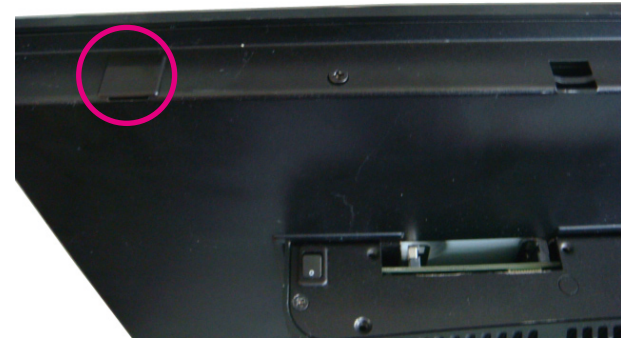


Installing the Power Adapter Bracket

(For APPC 1940T only)

1. Locate the mounting screws for the bracket on the back side of the chassis.
2. Remove the mounting screws and store them in a safe place for later use.



3. Wire the power adapter cabling into the cable opening on the bracket, then place the adapter inside the bracket.

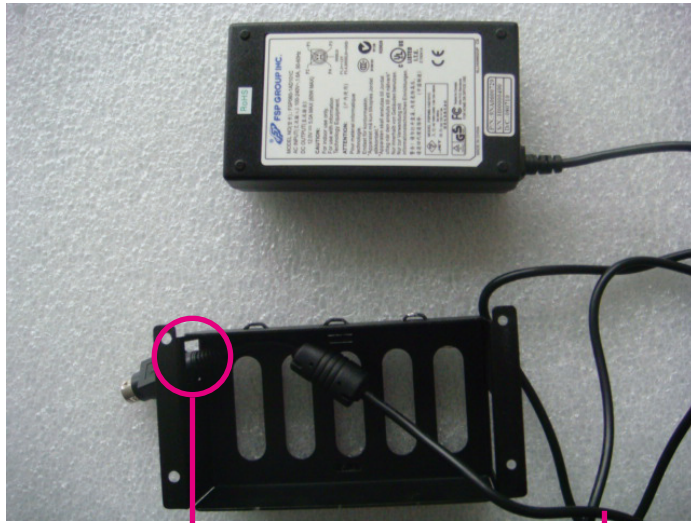


Cable opening

Power adapter cable



4. Turn the bracket over to the back side, and place the cable tie into the two tie mounts.

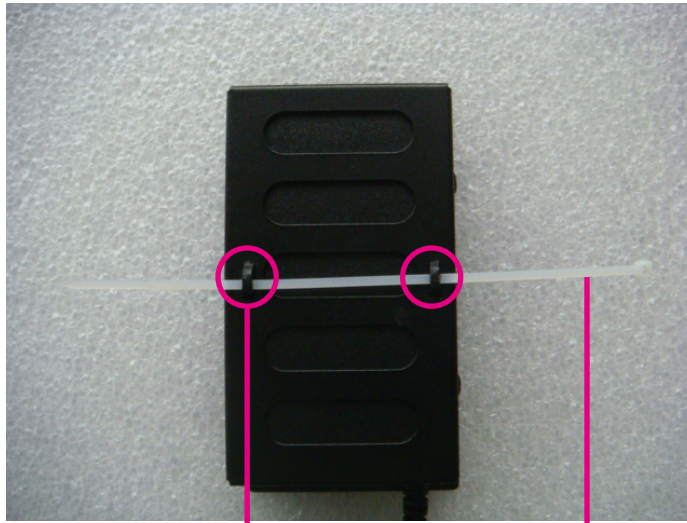


Tie mount

Cable tie

5. Wrap the power adapter cable, then secure the cable firmly by tying the cable tie.




6. With the bracket still facing backwards, align the mounting holes on the bracket to the mounting holes on the back of the chassis, then tighten screws to secure it. Once secured, plug the power adapter cable into the DC input.

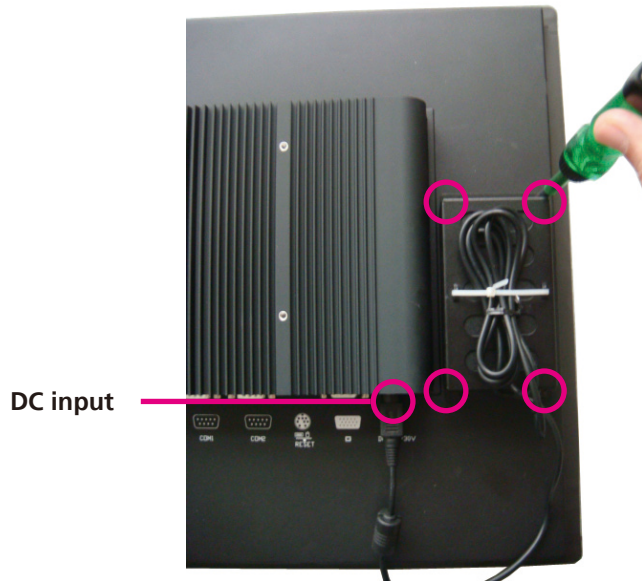


Panel Mounting

1. Select a place on the panel where you will mount the Panel PC.
2. Cut out a shape on the panel that corresponds to the Panel PC's rear dimensions.


The thickness of the panel (e.g. steel board, plank, acrylic board, wall, etc.) where you will mount the Panel PC must not exceed 5mm for APPC 1240T/1245T/1540T/1740T and 3mm for APPC 1940T. If the distance between the front bezel and panel mount hole is too wide, it will not fit the panel mount kit.

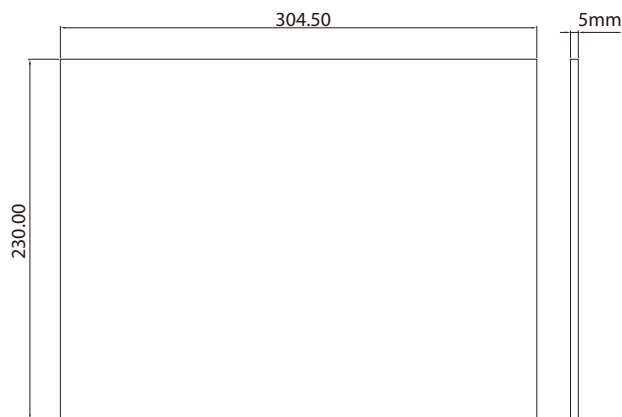


APPC 1240T/1245T

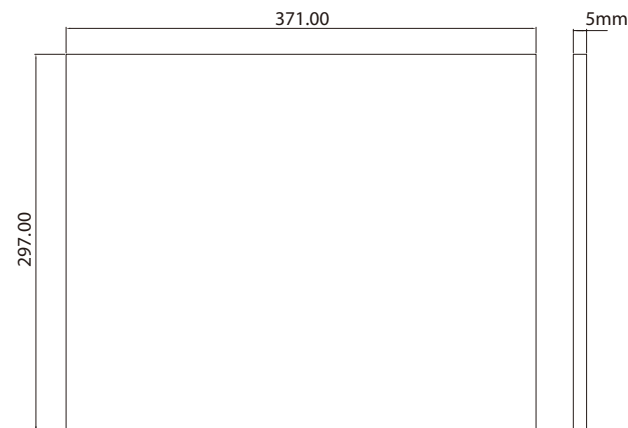

APPC 1540T

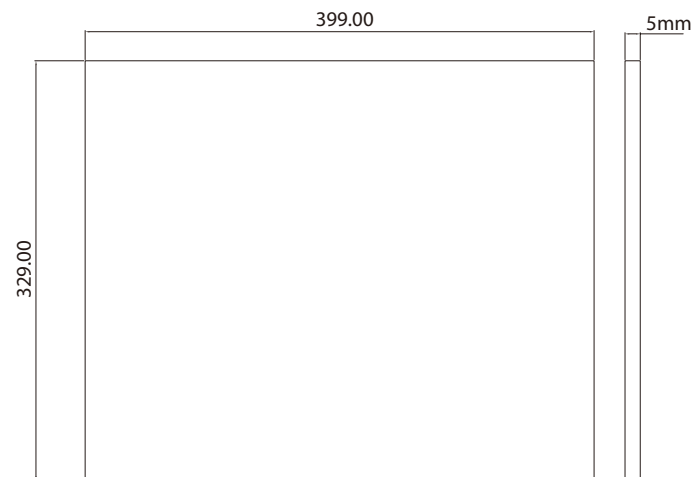

APPC 1740T

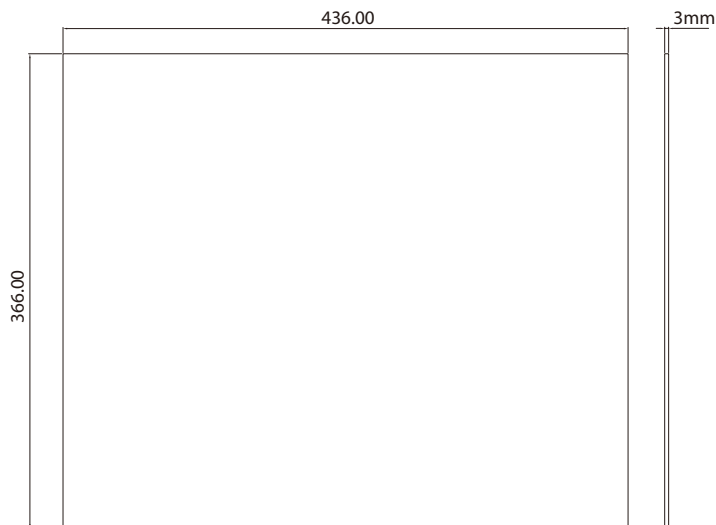

APPC 1940T



The Torque value:
APPC series: 5.8~6.5 kg-cm

- Slide the Panel PC through the hole until it is properly fitted against the panel.
- Position the mounting clamps along the rear edges of the Panel PC. The first and second clamps must be positioned and secured diagonally prior to mounting the rest of the clamps. Tighten the clamp's screw until it touches the panel.



Do not overtighten the screws to prevent damaging the Panel PC.

CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for the APPC Series. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM Web site at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration


Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup






 





When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup.

Press the  key to enter Setup:


Legends

| Key | Function |
|---|--|
|  | Moves the highlight left or right to select a menu. |
|  | Moves the highlight up or down between sub-menus or fields. |
|  | Exits the BIOS Setup Utility. |
|  | Scrolls forward through the values or options of the highlighted field. |
|  | Scrolls backward through the values or options of the highlighted field. |
|  | Selects a field. |
|  | Displays General Help. |
|  | Load previous values. |
|  | Load optimized default values. |
|  | Saves and exits the Setup program. |
|  | Press <Enter> to enter the highlighted sub-menu |


Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

 Submenu

When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.



System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.



ACPI Settings

This section is used to configure ACPI Settings.



Enable Hibernation

Enables or disables system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some OS.

ACPI Sleep State



Select the highest ACPI sleep state the system will enter when the suspend button is pressed. The options are Suspend Disabled and S3 (Suspend to RAM).

IT8786E Super IO Configuration

This section is used to configure the serial ports.



Super IO Chip

Displays the Super I/O chip used on the board.



Serial Port 1 Configuration

This section is used to configure serial port 1.



Serial Port

Enables or disables the serial port.

Onboard Serial Port Mode

Select this to change the serial port mode to RS232, RS422, RS485 or RS485 Auto.

Terminal Resistor

Enables or disables the terminal resistor.

Serial Port 2 Configuration

This section is used to configure serial port 2.



Serial Port

Enables or disables the serial port.

Onboard Serial Port Mode


Select this to change the serial port mode to RS232, RS422, RS485 or RS485 Auto.

Terminal Resistor

Enables or disables the terminal resistor.

Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.

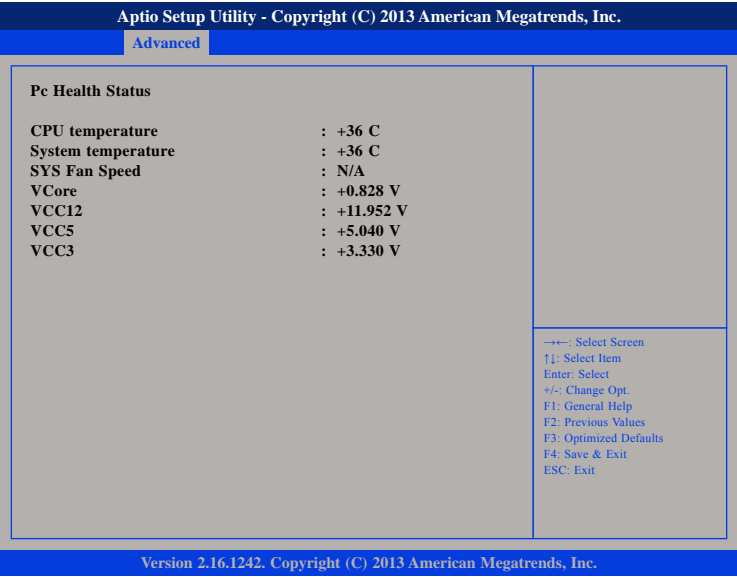

CPU Temperature

Detects and displays the current CPU temperature.

System Temperature

Detects and displays the current system temperature.

SYS Fan Speed

Detects and displays the system fan speed.

VCore

Detects and displays the Vcore CPU voltage.

VCC12

Detects and displays 12V voltage.

VCC5

Detects and displays 5V voltage.

VCC3

Detects and displays 3.3V voltage.

CPU Configuration

This section is used to configure the CPU.



Active Processors Cores

Select the number of cores to enable in each processor package.

Limit CPUID Maximum

The CPUID instruction of some newer CPUs will return a value greater than 3. The default is Disabled because this problem does not exist in the Windows series operating systems. If you are using an operating system other than Windows, this problem may occur. To avoid this problem, enable this field to limit the return value to 3 or lesser than 3.

Execute Disable Bit

When this field is set to Disabled, it will force the XD feature flag to always return to 0. XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3).

Intel® Virtualization Technology

Enables or disables Intel Virtualization technology.

Socket 0 CPU Information

Display information on the CPU installed on socket 0.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Advanced

Socket 0 CPU Information

Intel(R) Atom(TM) CPU E3826 @ 1.46GHz

CPU Signature30679

Microcode Patch901

Max CPU Speed1460 MHz

Min CPU Speed533 MHz

Processor Cores2

Intel HT TechnologyNot Supported

Intel VT-x TechnologySupported

L1 Data Cache24 kB x 2

L1 Code Cache32 kB x 2

L2 Cache512 kB x 1

L3 CacheNot Present

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

PPM Configuration

This section is used to configure the Processor Power Management (PPM) configuration.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Advanced

PPM Configuration

EIST[Disabled]

Enable/Disable Intel SpeedStep

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

EIST

Enables or disables Intel® SpeedStep.



IDE Configuration

This section is used to configure the SATA drives.



Serial-ATA (SATA)

Enables or disables the SATA controller.

SATA Speed Support

Configures the SATA controller as Gen1 or Gen2.

SATA Mode

Configures the SATA as IDE or AHCI mode.

- IDE This option configures the Serial ATA drives as Parallel ATA physical storage device.
- AHCI This option configures the Serial ATA drives to use AHCI (Advanced Host Controller Interface). AHCI allows the storage driver to enable the advanced Serial ATA features which will increase storage performance.

Serial-ATA Port 0

Enables or disables SATA port 0.

SATA Port0 HotPlug

Enables or disables hot pluggable support on SATA port 0.

Serial-ATA Port 1

Enables or disables SATA port 1.

SATA Port1 HotPlug

Enables or disables hot pluggable support on SATA port 1.



USB Configuration

This section is used to configure the USB.



Troubleshooting: When installing Windows 7 from USB, USB 3.0 will not be supported. Please disable XHCI and enable EHCI to allow USB installation of Windows 7.

Legacy USB Support

- Enable Enables Legacy USB.
- Auto Disables support for Legacy when no USB devices are connected.
- Disable Keeps USB devices available only for EFI applications.

USB3.0 Support


Enables or disables USB 3.0 controller support.

XHCI Hand-off and EHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off and EHCI Hand-off. The XHCI and EHCI ownership change should be claimed by the XHCI and EHCI driver respectively.

Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.

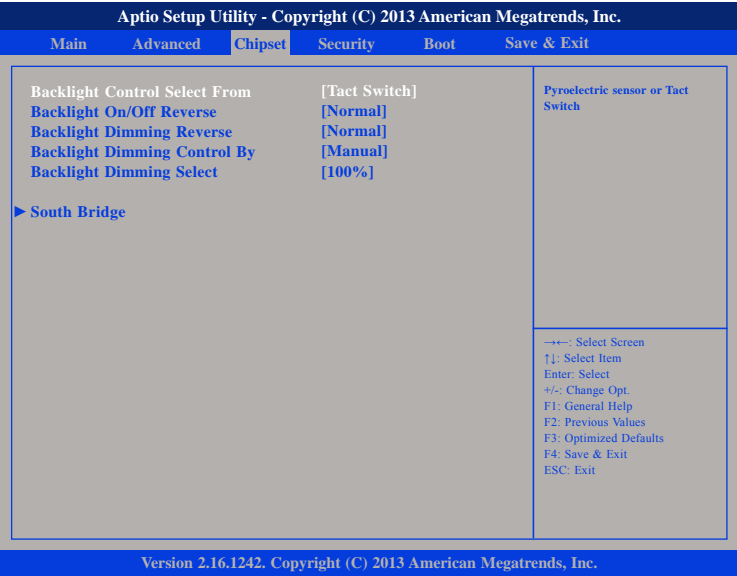

Backlight Control Select From

The available options are Pyroelectric sensor and Tact Switch.

Backlight On/Off Reverse

Enables or disables reverse backlight On/Off. Please configure this option only when changing the panel, otherwise the display may not work.

Backlight Dimming Reverse

The available options are PWM & Analog Dimming Reverse and Normal.

Backlight Dimming Control By

The available options are Tact Switch, Manual and Light sensor.

Backlight Dimming Select

Adjusts the brightness of the backlight.

South Bridge

Enters the South Bridge submenu.



South Bridge



High Precision Timer

Enables or disables high precision event timer.

Restore AC Power Loss

Select the AC power state when power is re-applied after a power failure.

PCH Azalia Configuration



Azalia

Control detection of the Azalia device.

| | |
|----------|--|
| Disabled | Azalia will be unconditionally Disabled. |
| Enabled | Azalia will be unconditionally Enabled. |

Azalia HDMI Codec

Enables or disables internal HDMI codec for Azalia.



USB Configuration

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Chipset

USB Configuration

XHCI Mode

[Disabled]

USB 2.0(EHCI) Support

[Enabled]

USB RMH Mode

[Enabled]

USB EHCI debug

[Disabled]

Control the USB EHCI (USB 2.0) functions. One EHCI controller must always be enabled.

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

USB 2.0(EHCI) Support

Enables or disables the Enhanced Host Controller Interface (USB 2.0), one EHCI controller must always be enabled.

USB RMH Mode

Enables or disables PCH USB rate matching hubs mode.

USB EHCI Debug

Enables or disables PCH EHCI debug capability.

PCI Express Configuration

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Chipset

PCI Express Configuration

PCI Express Port 0

[Enabled]

PCI Express Port 1

[Enabled]

PCI Express Port 2

[Enabled]

PCI Express Port 3

[Enabled]

Enable or Disable the PCI Express Port 0 in the Chipset.

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

PCI Express Port 0 to PCI Express Port 3

Enables or disables the PCI Express ports 0 to 3 on the chipset.



Security

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

MainAdvancedChipsetSecurityBootSave & Exit

Password Description

If **ONLY** the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.

If **ONLY** the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User Will have Administrator rights.

The password length must be in the following range:

| | |
|----------------|----|
| Minimum length | 3 |
| Maximum length | 20 |

Administrator Password

User Password

Set Administrator Password

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Administrator Password

Select this to reconfigure the administrator's password.

User Password

Select this to reconfigure the user's password.

Boot

This section is used to configure the boot features.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

MainAdvancedChipsetSecurityBootSave & Exit

Boot Configuration

Bootup NumLock State

[On]

Fast Boot

[Disabled]

Network

[Enabled]

Onboard LAN PXE

[Disabled]

Boot Option Priorities

Boot Option #1

[SATA PM: TOSHIBA M. . .]

Boot Option #2

[UEFI: Built-in EFI . . .]

Hard Drive BBS Priorities

Select the keyboard NumLock state

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Fast Boot

When enabled, the BIOS will shorten or skip some check items during POST. This will decrease the time needed to boot the system.

Copyright © 2015 NEXCOM International Co., Ltd. All Rights Reserved.

89

APPC 1240T/1245T/1540T/1740T/1940T User Manual



Network

Controls the execution of UEFI and legacy PXE OpROM.

Onboard LAN PXE


Options to disable onboard LAN PXE ROM or enable it for LAN1 or LAN2 .

Boot Option Priorities

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.

Hard Drive BBS Priorities

Sets the order of the legacy devices in this group.

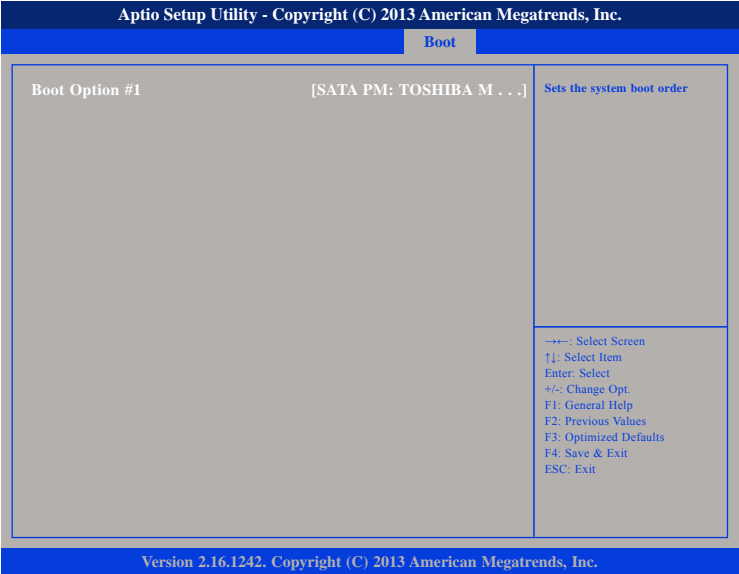

Save & Exit



Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the Setup utility without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

APPENDIX A: POWER CONSUMPTION

Power Consumption Management

Purpose

The purpose of the power consumption test is to verify the power dissipation of the system and the load of the power supply.

Test Equipment

1. PROVA CM-07 AC/DC CLAMP METER
2. Burn-in test ver:6.0

Device Under Test

DUT: sys#1

Test Procedure

1. Power up the DUT, boot into Windows XP.
2. Enter standby mode (HDD power down).
3. Measure the power consumption and record it.
4. Run Burn-in test program and apply 100% full loading.
5. Before and after testing, test the system insulation.

APPC 1940T

| | +12V | +24V | +30V |
|-------------------|--------|--------|-------|
| Full-Loading Mode | 1.99A | 1.04A | 0.86A |
| Total | 23.88W | 24.96W | 25.9W |
| Standby Mode | 0.1A | 0.1A | 0.1A |
| Total | 1.2W | 1.2W | 1.2W |

APPC 1740T

| | +12V | +24V | +30V |
|-------------------|--------|--------|-------|
| Full-Loading Mode | 2.13A | 1.09A | 0.91A |
| Total | 25.56W | 26.16W | 27.3W |
| Standby Mode | 0.1A | 0.1A | 0.1A |
| Total | 1.2W | 1.2W | 1.2W |

APPC 1540T

| | +12V | +24V | +30V |
|-------------------|-------------|-------------|-------------|
| Full-Loading Mode | 1.19A | 0.63A | 0.52A |
| Total | 14.28W | 15.12W | 15.6W |
| Standby Mode | 0.1A | 0.1A | 0.1A |
| Total | 1.2W | 1.2W | 1.2W |

APPC 1240T

| | +12V | +24V | +30V |
|-------------------|-------------|-------------|-------------|
| Full-Loading Mode | 1.46A | 0.66A | 0.56A |
| Total | 17.52W | 15.84W | 16.8W |
| Standby Mode | 0.1A | 0.1A | 0.1A |
| Total | 1.2W | 1.2W | 1.2W |

APPC 1245T

| | +12V | +24V | +30V |
|-------------------|-------------|-------------|-------------|
| Full-Loading Mode | 1.45A | 0.76A | 0.62A |
| Total | 17.4W | 18.4W | 18.6W |
| Standby Mode | 0.1A | 0.1A | 0.1A |
| Total | 1.2W | 1.2W | 1.2W |